

# Preface

## Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

Version 1.0C

## Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

## Trademark Recognition

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corp.

MMX, Pentium, Pentium-II, Pentium-III, Celeron are registered trademarks of Intel Corporation.

Other product names used in this manual are the properties of their respective owners and are acknowledged.

## Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment onto an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Shielded interconnect cables and a shielded AC power cable must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

## Preface

## Declaration of Conformity

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

## Canadian Department of Communications

This class B digital apparatus meets all requirements of the Canadian Interference-causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## About the Manual

The manual consists of the following:

### Chapter 1

#### Introducing the Motherboard

Describes features of the motherboard.

Go to  page 1

### Chapter 2

#### Installing the Motherboard

Describes installation of motherboard components.

Go to  page 7

### Chapter 3

#### Using BIOS

Provides information on using the BIOS Setup Utility.

Go to  page 25

### Chapter 4

#### Using the Motherboard Software

Describes the motherboard software

Go to  page 61

### Chapter 5

#### Trouble Shooting

Provides basic trouble shooting tips

Go to  page 65

# TABLE OF CONTENTS

---



---

<b>Preface</b>	<b>i</b>
<b>Chapter 1</b>	<b>1</b>
<b>Introducing the Motherboard</b>	<b>1</b>
Introduction.....	1
Feature.....	2
Specifications.....	4
Motherboard Components.....	6
<b>Chapter 2</b>	<b>7</b>
<b>Installing the Motherboard</b>	<b>7</b>
Safety Precautions.....	7
Choosing a Computer Case.....	7
Installing the Motherboard in a Case.....	7
Checking Jumper Settings.....	8
<i>Setting Jumpers.....</i>	<i>8</i>
<i>Checking Jumper Settings.....</i>	<i>9</i>
<i>Jumper Settings.....</i>	<i>9</i>
Installing Hardware.....	10
<i>Installing the Processor.....</i>	<i>10</i>
<i>Installing Memory Modules.....</i>	<i>12</i>
<i>Expansion Slots.....</i>	<i>14</i>
<i>Connecting Optional Devices.....</i>	<i>16</i>
<i>Installing a SATA Hard Drive.....</i>	<i>19</i>
Connecting I/O Devices.....	20
Connecting Case Components.....	21
<i>Front Panel Header.....</i>	<i>24</i>
<b>Chapter 3</b>	<b>25</b>
<b>Using BIOS</b>	<b>25</b>
About the Setup Utility.....	25
<i>The Standard Configuration.....</i>	<i>25</i>
<i>Entering the Setup Utilities.....</i>	<i>25</i>
<i>Resetting the Default CMOS Values.....</i>	<i>26</i>
Using BIOS.....	26
<i>BIOS Navigation Key.....</i>	<i>27</i>
<i>Main Menu.....</i>	<i>28</i>
<i>Advanced Menu.....</i>	<i>29</i>
<i>Chipset Menu.....</i>	<i>41</i>

<i>M.I.B.III(MB Intelligent Bios III) Menu</i> .....	48
<i>Boot Menu</i> .....	54
<i>Security Menu</i> .....	56
<i>Exit Menu</i> .....	59
<i>Updating the BIOS</i> .....	60

## **Chapter 4** **61**

### **Using the Motherboard Software** **61**

Auto-installing under Windows XP/7/8.....	61
<i>Running Setup</i> .....	61
Manual Installation.....	63
ECS Utility Software .....	63

## **Chapter 5** **65**

### **Trouble Shooting** **65**

Start up problems during assembly.....	65
Start up problems after prolong use.....	66
Maintenance and care tips.....	66
Basic Troubleshooting Flowchart.....	67

# Chapter 1

## Introducing the Motherboard

---

### Introduction

Thank you for choosing the H61H2-M13 motherboard. This motherboard is a high performance, enhanced function motherboard designed to support the LGA1155 socket for the latest Intel® Core™ Family/Pentium®/Celeron® processors\*<sup>1</sup> for high-end business or personal desktop markets.

This motherboard is based on Intel® H61 Chipset for best desktop platform solution. H61 is a single-chip, highly integrated, high performance Hyper-Threading peripheral controller, unmatched by any other single chip-device controller. This motherboard supports up to 16 GB of system memory with dual channel DDR3 1600\*<sup>2</sup>/1333/1066 SDRAM. One PCI is supported, fully compliant with PCI rev 2.2 specification at 33MHz. High resolution graphics via PCI Express x16 slot, intended for Graphics Interface. In addition, one PCI Express slot x1 is supported. It implements an EHCI (Enhanced Host Controller Interface) compliant interface that provides eight USB 2.0 ports (four USB 2.0 ports at the back panel and two USB 2.0 headers support additional four USB 2.0 ports).

The motherboard is equipped with full set of I/O ports in the rear panel, including PS/2 mouse and PS/2 keyboard connectors, one D-sub (VGA) port, one RJ45 LAN port, four USB 2.0 ports, and audio jacks for microphone, line-in and line-out.

In addition, this motherboard supports four SATA 3.0 Gb/s connectors for expansion.



*\*<sup>1</sup> When accommodating Intel 3<sup>rd</sup> Generation CPU, the PCI Express 16X slot can run at Gen3 speed, which accelerates on 32GB/s rate that effectively delivers double of PCI Express Gen2 speed.*

*\*<sup>2</sup> The 3rd Generation CPU required.*

## Feature

### Processor

The motherboard uses an LGA1155 type of socket that carries the following features:

- Accommodates the latest Intel® Core™ Family /Pentium®/Celeron® processors in LGA1155 socket
- Supports “Hyper-Threading” technology CPU
- Supports 22nm & 32nm Intel Core™ micro-architecture.
- DMI 5.0GT/s.
- One PCI Express x16 port

“Hyper-Threading” technology enables the operating system into thinking it’s hooked up to two processors, allowing two threads to be run in parallel, both on separate “logical” processors within the same physical processor.

### Chipset

The Intel H61 Chipset is a single-chip with proven reliability and performance.

- Support one PCI Express x1 slot
- Integrated four SATA 3.0 Gb/s Host Controller
- Eight USB 2.0 ports supported
- Serial Peripheral Interface (SPI) support
- Integrated Graphics Support with PAVP 1.5
- Intel® High Definition Audio Controller

### Extra Chips

- ITE IT8893 PCI Bridge supports one PCI slot expansion

### Memory

- Supports DDR3 1600\*/1333/1066 DDR3 SDRAM with Dual-channel architecture
- Accommodates two unbuffered DIMMs
- Up to 8 GB per DIMM with maximum memory size up to 16 GB



\* The 3rd Generation CPU required.

### Audio

- 5.1+2 Channel High Definition Audio Codec
- Meets Microsoft WLP3.x (Windows Logo Program) audio requirements
- All DACs supports 44.1k/48k/96k/192kHz sample rate
- Software selectable 2.5V/3.2V/4.0V VREFOUT
- Direct Sound 3D™ compatible
- Power Support: Digital: 3.3V; Analog: 5.0V

## Introducing the Motherboard

## Onboard LAN (Optional)

The onboard LAN provides the following features:

- |   |
|---|
| <ul style="list-style-type: none"> <li>• Supports PCI Express™ 1.1</li> <li>• Integrated 10/100/1000 transceiver</li> <li>• Wake-on-LAN and remote wake-up support</li> </ul> |
| <ul style="list-style-type: none"> <li>• Supports PCI Express™ 1.1</li> <li>• Integrated 10/100 transceiver</li> <li>• Wake-on-LAN and remote wake-up support</li> </ul>      |

## Expansion Options

The motherboard comes with the following expansion options:

- One PCI Express x16 slot for Graphic Interface
- One PCI Express x1 slot
- One 32-bit PCI v2.2 compliant slot
- Four SATA 3.0 Gb/s connectors

## Integrated I/O

The motherboard has a full set of I/O ports and connectors:

- One PS/2 keyboard and PS/2 mouse connectors
- One RJ45 LAN port
- One D-sub (VGA) port
- Four USB 2.0 ports
- Audio jacks for microphone, line-in and 6-ch line-out

## BIOS Firmware

This motherboard uses AMI BIOS that enables users to configure many system features including the following:

- Power management
- Wake-up alarms
- Graphic parameters


The firmware can also be used to set parameters for different processor clock speeds.



1. Some hardware specifications and software items are subject to change without prior notice.

2. Due to chipset limitation, we recommend that motherboard be operated in the ambience between 0 and 50 ° C.


## Specifications

CPU	<ul style="list-style-type: none"> <li>LGA1155 socket for the latest Intel® Core™ Family/Pentium®/Celeron® processors</li> <li>Supports “Hyper-Threading” technology CPU</li> </ul>
Chipset	Intel® H61 Chipset
Memory	<ul style="list-style-type: none"> <li>Dual-channel DDR3 memory architecture</li> <li>2 x 240-pin DDR3 DIMM sockets support up to 16 GB</li> <li>Supports 1600*/1333/1066 DDR3 SDRAM</li> </ul>
	 <i>* The 3rd Generation CPU required.</i>
Expansion Slots	<ul style="list-style-type: none"> <li>1 x PCI Express x16 slot</li> <li>1 x PCI Express x1 Gen2 slot</li> <li>1 x PCI slot</li> </ul>
Storage	<ul style="list-style-type: none"> <li>Supported by Intel® H61 Express Chipset</li> <li>-4 x Serial ATA 3.0 Gb/s Host Controllers</li> </ul>
Audio	<ul style="list-style-type: none"> <li>VIA VT1705 6-ch HD audio CODEC</li> <li>Compliant with HD audio specification</li> </ul>
LAN	<ul style="list-style-type: none"> <li>Realtek 8105E 10/100 LAN</li> <li>Realtek 8111E Gigabit LAN (Optional)</li> </ul>
Rear Panel I/O	<ul style="list-style-type: none"> <li>4 x USB 2.0 ports</li> <li>1 x D-sub (VGA) port</li> <li>1 x RJ45 LAN connector</li> <li>1 x PS/2 keyboard &amp; PS/2 mouse connectors</li> <li>1 x Audio port (Line in, microphone in, 6-ch line out)</li> </ul>
Internal I/O Connectors & Headers	<ul style="list-style-type: none"> <li>1 x 24-pin ATX Power Supply connector</li> <li>1 x 4-pin ATX Power Supply connector</li> <li>1 x 4-pin CPU_FAN connector</li> <li>1 x 3-pin SYS_FAN connector</li> <li>2 x USB 2.0 headers support additional four USB 2.0 ports</li> <li>4 x Serial SATA 3.0 Gb/s connectors</li> <li>1 x COM header</li> <li>1 x ME_UNLOCK header</li> <li>1 x Case Open header</li> <li>1 x TPM header</li> <li>1 x LPT header</li> <li>1 x USBPWR_F jumper</li> <li>1 x USBPWR_R jumper</li> <li>1 x Front panel switch/LED header</li> <li>1 x Front panel audio header</li> <li>1 x Speaker header</li> <li>1 x Clear CMOS header</li> </ul>
System BIOS	<ul style="list-style-type: none"> <li>AMI BIOS with 32Mb SPI Flash ROM</li> <li>Supports ECS M.I.B III Utility</li> </ul>
AP Support	Supports eBLU/eDLU ( <i>Warning: Microsoft .NET Framework 3.5 is required</i> )
Form Factor	Micro ATX Size, 225mm x 190mm

## Introducing the Motherboard



# Motherboard Components

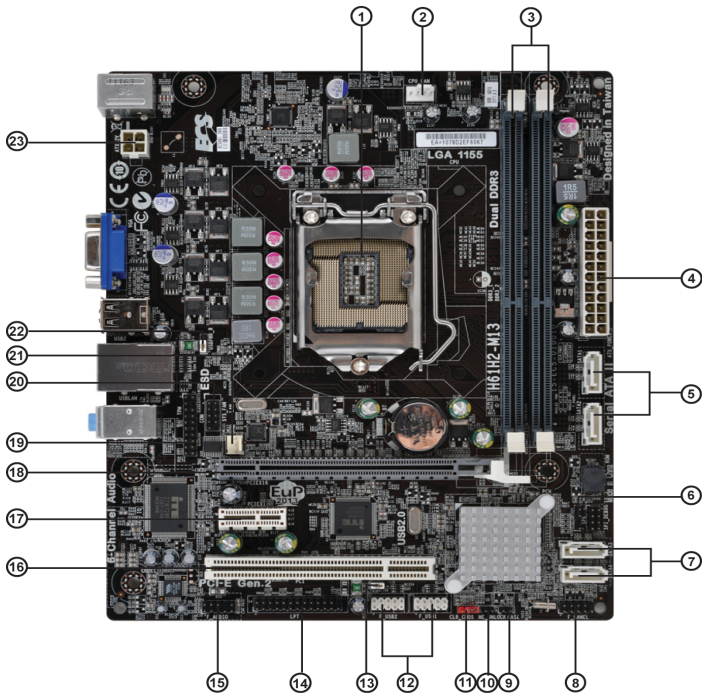

## Introducing the Motherboard

*Table of Motherboard Components*

LABEL	COMPONENTS
1. CPU Socket	The latest Intel® Core™ Family/Pentium® /Celeron® processors in the LGA1155 socket
2. CPU_FAN	4-pin CPU cooling fan connector
3. DDR3_1~2	240-pin DDR3 SDRAM slots
4. ATX_POWER	Standard 24-pin ATX power connector
5. SATA1~2	Serial ATA 3.0 Gb/s connectors
6. SPK	Speaker header
7. SATA3~4	Serial ATA 3.0 Gb/s connectors
8. F_PANEL	Front panel switch/LED header
9. CASE	Case open header
10. ME_UNLOCK	ME unlock header-for factory use only
11. CLR_CMOS	Clear CMOS jumper
12. F_USB1~2	Front panel USB 2.0 headers
13. USBPWR_F	Front panel USB power select jumper
14. LPT	Onboard parallel port header
15. F_AUDIO	Front panel audio header
16. PCI	32-bit add-on card slot
17. PCIEX1	PCI Express x1 slot
18. PCIEX16	PCI Express slot for graphics interface
19. TPM	Trusted platform module header
20. COM	Onboard serial port header
21. SYS_FAN	3-pin system cooling fan connector
22. USBPWR_R	Rear panel USB/PS2 power select jumper
23. ATX12V	4-pin +12V power connector

This concludes Chapter 1. The next chapter explains how to install the motherboard.

## **Chapter 2**

### ***Installing the Motherboard***

---

#### **Safety Precautions**

- Follow these safety precautions when installing the motherboard
- Wear a grounding strap attached to a grounded device to avoid damage from static electricity
- Discharge static electricity by touching the metal case of a safely grounded object before working on the motherboard
- Leave components in the static-proof bags they came in
- Hold all circuit boards by the edges. Do not bend circuit boards

#### **Choosing a Computer Case**

There are many types of computer cases on the market. The motherboard complies with the specifications for the micro ATX system case. Some features on the motherboard are implemented by cabling connectors on the motherboard to indicators and switches on the system case. Make sure that your case supports all the features required.

Most cases have a choice of I/O templates in the rear panel. Make sure that the I/O template in the case matches the I/O ports installed on the rear edge of the motherboard.


This motherboard carries a micro ATX form factor of 225 x 190 mm. Choose a case that accommodates this form factor.

#### **Installing the Motherboard in a Case**

Refer to the following illustration and instructions for installing the motherboard in a case.

Most system cases have mounting brackets installed in the case, which correspond the holes in the motherboard. Place the motherboard over the mounting brackets and secure the motherboard onto the mounting brackets with screws.

Ensure that your case has an I/O template that supports the I/O ports and expansion slots on your motherboard.

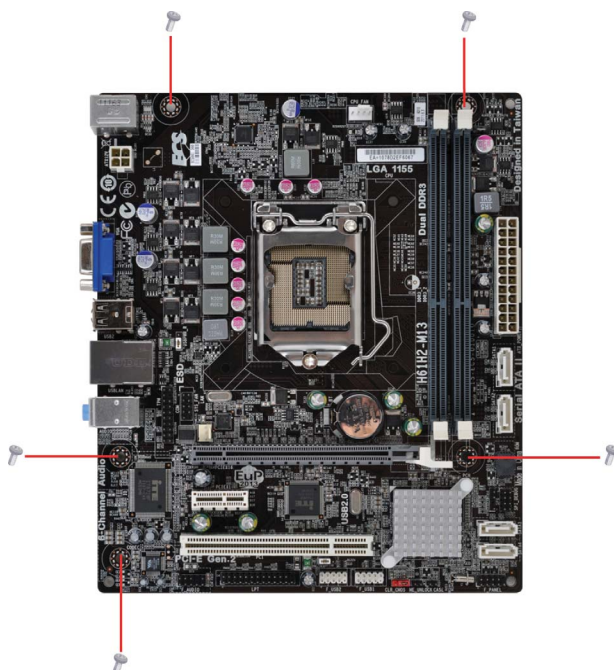

*Do not over-tighten the screws as this can stress the motherboard.*

## Checking Jumper Settings

This section explains how to set jumpers for correct configuration of the motherboard.

### Setting Jumpers

Use the motherboard jumpers to set system configuration options. Jumpers with more than one pin are numbered. When setting the jumpers, ensure that the jumper caps are placed on the correct pins.

The illustrations show a 2-pin jumper. When the jumper cap is placed on both pins, the jumper is **SHORT**. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is **OPEN**.




**SHORT**




**OPEN**

This illustration shows a 3-pin jumper. Pins 1 and 2 are **SHORT**.

 



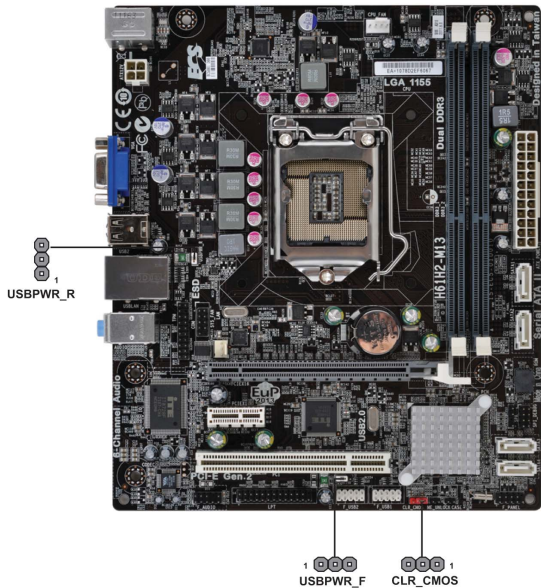

Checking Jumper Settings

The following illustration shows the location of the motherboard jumpers. Pin 1 is labeled.



Jumper Settings

Jumper	Type	Description	Setting (default)	
CLR_CMOS	3-pin	Clear CMOS	1-2: NORMAL 2-3: CLEAR Before clearing the CMOS, make sure to turn off the system.	 1 CLR_CMOS
USBPWR_R	3-pin	Rear USB/PS2 Power Select Jumper	1-2: VCC 2-3: 5VSB	 1 USBPWR_R
USBPWR_F	3-pin	Front Panel USB Power Select Jumper	1-2: VCC 2-3: 5VSB	1  USBPWR_F

 To avoid the system instability after clearing CMOS, we recommend users to enter the main BIOS setting page to “Load Default Settings” and then “Save and Exit Setup”.

**Installing the Motherboard**

## Installing Hardware

### Installing the Processor



*Caution: When installing a CPU heatsink and cooling fan make sure that you DO NOT scratch the motherboard or any of the surface-mount resistors with the clip of the cooling fan. If the clip of the cooling fan scrapes across the motherboard, you may cause serious damage to the motherboard or its components.*

*On most motherboards, there are small surface-mount resistors near the processor socket, which may be damaged if the cooling fan is carelessly installed.*

*Avoid using cooling fans with sharp edges on the fan casing and the clips. Also, install the cooling fan in a well-lit work area so that you can clearly see the motherboard and processor socket.*

### Before installing the Processor

This motherboard automatically determines the CPU clock frequency and system bus frequency for the processor. You may be able to change the settings in the system Setup Utility. We strongly recommend that you do not over-clock processors or other components to run faster than their rated speed.



*Warning:*

*1. Over-clocking components can adversely affect the reliability of the system and introduce errors into your system. Over-clocking can permanently damage the motherboard by generating excess heat in components that are run beyond the rated limits.*

*2. Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.*

This motherboard has an LGA1155 socket. When choosing a processor, consider the performance requirements of the system. Performance is based on the processor design, the clock speed and system bus frequency of the processor, and the quantity of internal cache memory and external cache memory.

### Fail-Safe Procedures for Over-clocking

When end-users encounter failure after attempting over-clocking, please take the following steps to recover from it.


1. Shut down the computer.
2. Press and hold the “Page Up Key (PgUp)” of the keyboard, and then boot the PC up.
3. Two seconds after the PC boots up, release the “Page Up Key (PgUp)”.
4. The BIOS returns to the default setting by itself.

## Installing the Motherboard

## CPU Installation Procedure

The following illustration shows CPU installation components.

- A. Disengaging of the Load Lever
  - Press the hook of lever down and pull it to the right side to release it from retention tab.
- B. Opening of the Load Plate
  - Lift the tail of the load lever.
  - Rotate the load plate to fully open position.
- C. Removing the Cap
  - Be careful not to touch the contact at any time.
- D. Inserting the Package
  - Grasp the package. Ensure to grasp on the edge of the substrate.
  - Make sure pin 1 indicator is on your bottom-left side.
  - Aim at the socket and place the package carefully into the socket by purely vertical motion.
- E. Closing the Load Plate
  - Rotate the load plate onto the package IHS (Intergrated Heat Spreader).
  - Engage the load lever while pressing down lightly onto the load plate.
  - Secure the load lever with the hook under retention tab.
- F. Fasten the cooling fan supporting base onto the CPU socket on the motherboard.
- G. Make sure the CPU fan is plugged to the CPU fan connector. Please refer to the CPU cooling fan user's manual for more detail installation procedure.

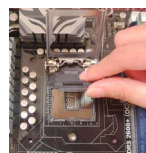

*\* For reference only*



- 1. To achieve better airflow rates and heat dissipation, we suggest that you use a high quality fan with 3800 rpm at least. CPU fan and heatsink installation procedures may vary with the type of CPU fan/ heatsink supplied. The form and size of fan/heatsink may also vary.
- 2. DO NOT remove the CPU cap from the socket before installing a CPU.
- 3. Return Material Authorization (RMA) requests will be accepted only if the motherboard comes with the cap on the LGA1155 socket.

**Installing Memory Modules**

This motherboard accommodates two memory modules. It can support two 240-pin DDR3 1600\*/1333/1066. The total memory capacity is 16 GB.

**DDR3 SDRAM memory module table**

Memory module	Memory Bus
DDR3 1066	533 MHz
DDR3 1333	667 MHz
DDR3 1600	800 MHz



\* The 3rd Generation CPU required.

You must install at least one module in any of the two slots. Total memory capacity is 16 GB.




Do not remove any memory module from its antistatic packaging until you are ready to install it on the motherboard. Handle the modules only by their edges. Do not touch the components or metal parts. Always wear a grounding strap when you handle the modules.



## Installation Procedure

Refer to the following to install the memory modules.

- 1 This motherboard supports unbuffered DDR3 SDRAM .
- 2 Push the latches on each side of the DIMM slot down.
- 3 Align the memory module with the slot. The DIMM slots are keyed with notches and the DIMMs are keyed with cutouts so that they can only be installed correctly.
- 4 Check that the cutouts on the DIMM module edge connector match the notches in the DIMM slot.
- 5 Install the DIMM module into the slot and press it firmly down until it seats correctly. The slot latches are levered upwards and latch on to the edges of the DIMM.
- 6 Install any remaining DIMM modules.

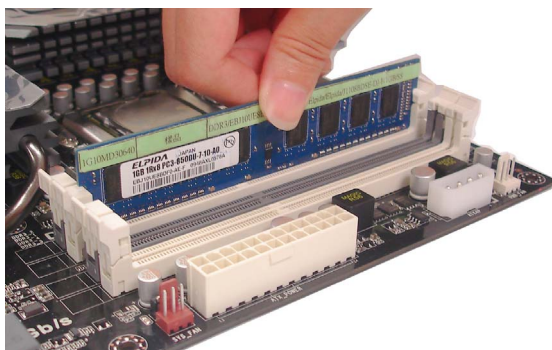


*\* For reference only*

Expansion Slots

Installing Add-on Cards

The slots on this motherboard are designed to hold expansion cards and connect them to the system bus. Expansion slots are a means of adding or enhancing the motherboard’s features and capabilities. With these efficient facilities, you can increase the motherboard’s capabilities by adding hardware that performs tasks that are not part of the basic system.

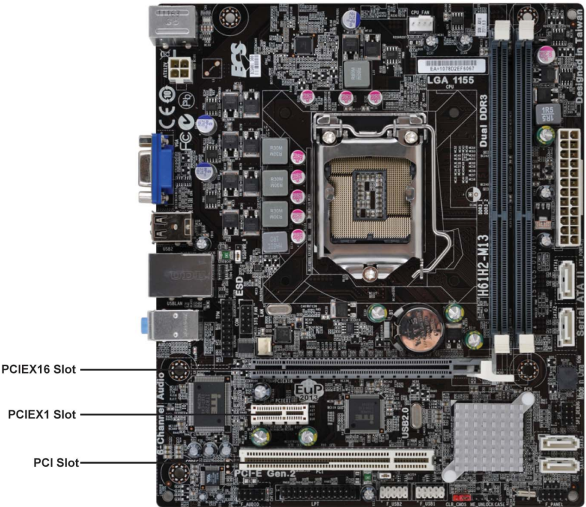


- PCIEX16 Slot**      The PCI Express x16 slot is used to install an external PCI Express graphics card.
- PCIEX1 Slot**      The PCI Express x1 slot is fully compliant to the PCI Express Base Specification revision 2.0.
- PCI Slot**      This motherboard is equipped with one standard PCI slot. PCI stands for Peripheral Component Interconnect and is a bus standard for expansion cards, which for the most part, is a supplement of the older ISA bus standard. The PCI slot on this board is PCI v2.2 compliant.



*Before installing an add-on card, check the documentation for the card carefully. If the card is not Plug and Play, you may have to manually configure the card before installation.*

Follow these instructions to install an add-on card:

- 1 Remove a blanking plate from the system case corresponding to the slot you are going to use.
- 2 Install the edge connector of the add-on card into the expansion slot. Ensure that the edge connector is correctly seated in the slot.
- 3 Secure the metal bracket of the card to the system case with a screw.

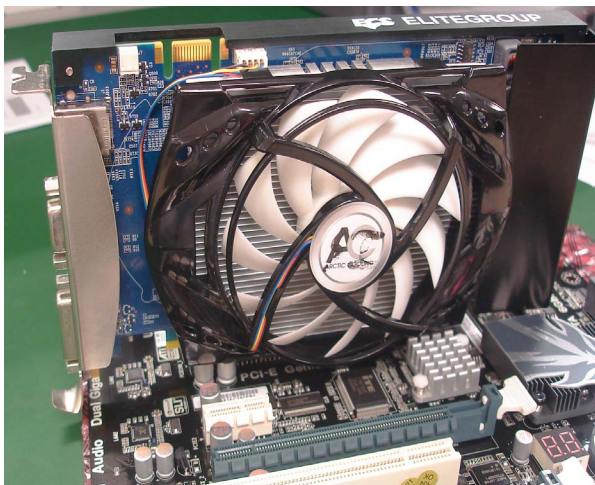


*\* For reference only*



1. For some add-on cards, for example graphics adapters and network adapters, you have to install drivers and software before you can begin using the add-on card.
2. The onboard PCI interface does not support 64-bit SCSI cards.

Connecting Optional Devices

Refer to the following for information on connecting the motherboard’s optional devices:

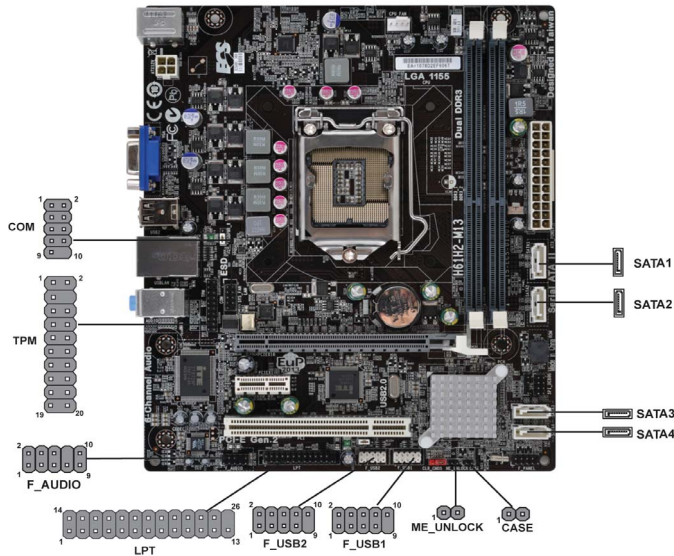

F\_AUDIO: Front Panel Audio header

This header allows the user to install auxiliary front-oriented microphone and line-out ports for easier access.

Pin	Signal Name	Pin	Signal Name
1	PORT 1L	2	AUD_GND
3	PORT 1R	4	PRESENCE#
5	PORT 2R	6	SENSE1_RETURN
7	SENSE_SEND	8	KEY
9	PORT 2L	10	SENSE2_RETURN

SATA1~4: Serial ATA connectors

These connectors are used to support the Serial ATA 3.0Gb/s devices, simpler disk drive cabling and easier PC assembly. It eliminates limitations of the current Parallel ATA interface. But maintains register compatibility and software compatibility with Parallel ATA.

Pin	Signal Name	Pin	Signal Name
1	Ground	2	TX+
3	TX-	4	Ground
5	RX-	6	RX+
7	Ground	-	-

**F\_USB1~2: Front Panel USB headers**

The motherboard has two USB 2.0 headers supporting four USB 2.0 ports. Additionally, some computer cases have USB ports at the front of the case. If you have this kind of case, use auxiliary USB connector to connect the front-mounted ports to the motherboard.

Pin	Signal Name	Function
1	USBPWR	Front Panel USB Power
2	USBPWR	Front Panel USB Power
3	USB_FP_P0-	USB Port 0 Negative Signal
4	USB_FP_P1-	USB Port 1 Negative Signal
5	USB_FP_P0+	USB Port 0 Positive Signal
6	USB_FP_P1+	USB Port 1 Positive Signal
7	GND	Ground
8	GND	Ground
9	Key	No pin
10	NC	Not connected



*Please make sure that the USB cable has the same pin assignment as indicated above. A different pin assignment may cause damage or system hang-up.*

**COM: Onboard serial port header**

Connect a serial port extension bracket to this header to add a serial port to your system.

Pin	Signal Name	Function
1	DCDB	Data Carrier Detect
2	SINB	Serial Input
3	SOUTB	UART B Serial Output
4	DTRB	UART B Data Terminal Ready
5	GND	Ground
6	DSRB	Data Set Ready
7	RTSB	UART B Request to Send
8	CTSB	Clear to Send
9	RI	Ring Indicator
10	Key	No pin

**ME\_UNLOCK: ME Unlock Header**

Pin 1-2	Function
Short	Unlock
Open	Lock

CASE: Chassis Intrusion Detect Header

This detects if the chassis cover has been removed. This function needs a chassis equipped with intrusion detection switch and needs to be enabled in BIOS.

Pin 1-2	Function
Short	Chassis cover is removed
Open	Chassis cover is closed

TPM: TPM module header

Trusted Platform Module (TPM) is a published specification detailing a microcontroller that can store secured information, and implementations of that specification.

Pin	Signal Name	Pin	Signal Name
1	TPM_CLK	11	LAD0
2	GND	12	GND
3	LFRAME#	13	RESERVE0
4	KEY	14	RESERVE1
5	LREST#	15	VCC3_DUAL
6	SMBDATA	16	SERIRQ
7	LAD3	17	GND
8	LAD2	18	GND
9	VCC3	19	LPCPD#
10	LAD1	20	SMBCLK

LPT: Onboard parallel port header

This is a header that can be used to connect to the printer, scanner or other devices.

Pin	Signal Name	Pin	Signal Name
1	STROBE	14	AFD
2	PD0	15	ERROR
3	PD1	16	PRNINIT
4	PD2	17	SLIN
5	PD3	18	Ground
6	PD4	19	Ground
7	PD5	20	Ground
8	PD6	21	Ground
9	PD7	22	Ground
10	ACK	23	Ground
11	BUSY	24	Ground
12	PE	25	Ground
13	SLCT	26	Key

## Installing a SATA Hard Drive

This section describes how to install a SATA Hard Drive.

### About SATA Connectors

Your motherboard features four SATA connectors supporting a total of four drives. SATA refers to Serial ATA (Advanced Technology Attachment) is the standard interface for the IDE hard drives which are currently used in most PCs. These connectors are well designed and will only fit in one orientation. Locate the SATA connectors on the motherboard and follow the illustration below to install the SATA hard drives.

### Installing Serial ATA Hard Drives

To install the Serial ATA (SATA) hard drives, use the SATA cable that supports the Serial ATA protocol. This SATA cable comes with a SATA power cable. You can connect either end of the SATA cable to the SATA hard drive or the connector on the motherboard.




**SATA cable** (optional)



**SATA power cable** (optional)

Refer to the illustration below for proper installation:

- 1 Attach either cable end to the connector on the motherboard.
- 2 Attach the other cable end to the SATA hard drive.
- 3 Attach the SATA power cable to the SATA hard drive and connect the other end to the power supply.

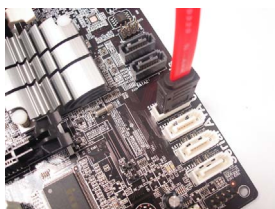


*\* For reference only*



*This motherboard supports the “Hot-Plug” function.*

## Connecting I/O Devices

The backplane of the motherboard has the following I/O ports:

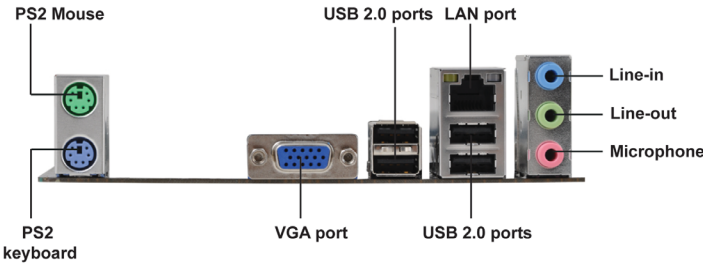


- PS2 Mouse** Use the upper PS/2 port to connect a PS/2 pointing device.
- PS2 Keyboard** Use the lower PS/2 port to connect a PS/2 keyboard.
- VGA Port** Connect your monitor to the VGA port.
- LAN Port** Connect an RJ-45 jack to the LAN port to connect your computer to the Network.
- USB 2.0 Ports** Use the USB 2.0 ports to connect USB 2.0 devices.
- Audio Ports** Use the three audio ports to connect audio devices. The first jack is for stereo line-in signal. The second jack is for stereo line-out signal. The third jack is for microphone.



## Connecting Case Components


After you have installed the motherboard into a case, you can begin connecting the motherboard components. Refer to the following:

- 1 Connect the CPU cooling fan cable to **CPU\_FAN**.
- 2 Connect the standard power supply connector to **ATX\_POWER**.
- 3 Connect the case switches and indicator LEDs to the **F\_PANEL**.
- 4 Connect the system cooling fan connector to **SYS\_FAN**.
- 5 Connect the auxiliary case power supply connector to **ATX12V**.
- 6 Connect the case speaker cable to **SPK**.

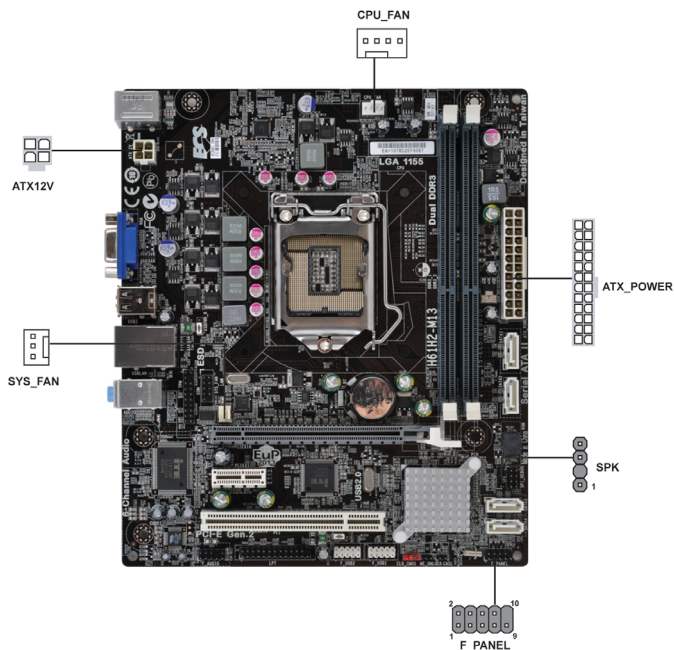

### Connecting 24-pin power cable

The ATX 24-pin connector allows you to connect to ATX v2.x power supply.

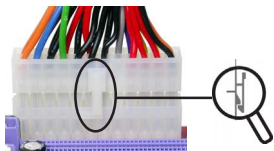


*24-pin power cable*

With ATX v2.x power supply, users please note that when installing 24-pin power cable, the latches of power cable and the ATX1 match perfectly.



**Connecting 4-pin power cable**

The ATX12V4P power connector is used to provide power to the CPU.

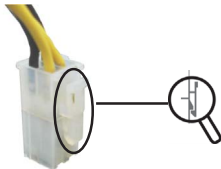

*4-pin power cable*

When installing 4-pin power cable, the latches of power cable and the ATX12V4P match perfectly.

**CPU\_FAN: CPU cooling FAN Power Connector**

Pin	Signal Name	Function
1	GND	System Ground
2	+12V	Power +12V
3	Sense	Sensor
4	PWM	PWM



*Users please note that the fan connector supports the CPU cooling fan of 1.1A ~ 2.2A (26.4W max) at +12V.*

**SYS\_FAN: System Cooling FAN Power Connector**

Pin	Signal Name	Function
1	GND	System Ground
2	+12V	Power +12V
3	Sense	Sensor

**ATX\_POWER: ATX 24-pin Power Connector**

Pin	Signal Name	Pin	Signal Name
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	Ground	15	Ground
4	+5V	16	PS_ON
5	Ground	17	Ground
6	+5V	18	Ground
7	Ground	19	Ground
8	PWRGD	20	-5V
9	+5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	Ground

**ATX12V: ATX 12V Power Connector**


Pin	Signal Name
1	Ground
2	Ground
3	+12V
4	+12V

**SPK: Speaker Header**

Pin	Signal Name
1	VCC
2	Key
3	GND
4	Signal

Front Panel Header

The front panel header (F\_PANEL) provides a standard set of switch and LED headers commonly found on ATX or Micro ATX cases. Refer to the table below for information:

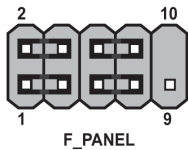

Pin	Signal	Function	Pin	Signal	Function
1	HD_LED_P	Hard disk LED(+)	2	FP PWR/SLP	*MSG LED(+)
3	HD_LED_N	Hard disk LED(-)	4	FP PWR/SLP	*MSG LED(-)
5	RST_SW_N	Reset Switch(-)	6	PWR_SW_P	Power Switch(+)
7	RST_SW_P	Reset Switch(+)	8	PWR_SW_N	Power Switch(-)
9	RSVD	Reserved	10	Key	No pin

\* MSG LED (dual color or single color)

Hard Drive Activity LED

Connecting pins 1 and 3 to a front panel mounted LED provides visual indication that data is being read from or written to the hard drive. For the LED to function properly, an IDE drive should be connected to the onboard IDE interface. The LED will also show activity for devices connected to the SCSI (hard drive activity LED) connector.

Power/Sleep/Message waiting LED

Connecting pins 2 and 4 to a single or dual-color, front panel mounted LED provides power on/off, sleep, and message waiting indication.

Reset Switch

Supporting the reset function requires connecting pin 5 and 7 to a momentary-contact switch that is normally open. When the switch is closed, the board resets and runs POST.

Power Switch

Supporting the power on/off function requires connecting pins 6 and 8 to a momentary-contact switch that is normally open. The switch should maintain contact for at least 50 ms to signal the power supply to switch on or off. The time requirement is due to internal de-bounce circuitry. After receiving a power on/off signal, at least two seconds elapses before the power supply recognizes another on/off signal.

This concludes Chapter 2. The next chapter covers the BIOS.

## Chapter 3

### *Using BIOS*

---

#### About the Setup Utility

The computer uses the latest “American Megatrends Inc.” BIOS with support for Windows Plug and Play. The CMOS chip on the motherboard contains the ROM setup instructions for configuring the motherboard BIOS.

The BIOS (Basic Input and Output System) Setup Utility displays the system’s configuration status and provides you with options to set system parameters. The parameters are stored in battery-backed-up CMOS RAM that saves this information when the power is turned off. When the system is turned back on, the system is configured with the values you stored in CMOS.

The BIOS Setup Utility enables you to configure:

- Hard drives, diskette drives and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power Management features

The settings made in the Setup Utility affect how the computer performs. Before using the Setup Utility, ensure that you understand the Setup Utility options.

This chapter provides explanations for Setup Utility options.

#### *The Standard Configuration*

A standard configuration has already been set in the Setup Utility. However, we recommend that you read this chapter in case you need to make any changes in the future.

This Setup Utility should be used:


- when changing the system configuration
- when a configuration error is detected and you are prompted to make changes to the Setup Utility
- when trying to resolve IRQ conflicts
- when making changes to the Power Management configuration
- when changing the password or making other changes to the Security Setup

#### *Entering the Setup Utility*

When you power on the system, BIOS enters the Power-On Self Test (POST) routines. POST is a series of built-in diagnostics performed by the BIOS. After the POST routines are completed, the following message appears:

**Press DEL to enter SETUP**

Press the delete key to access BIOS Setup Utility.

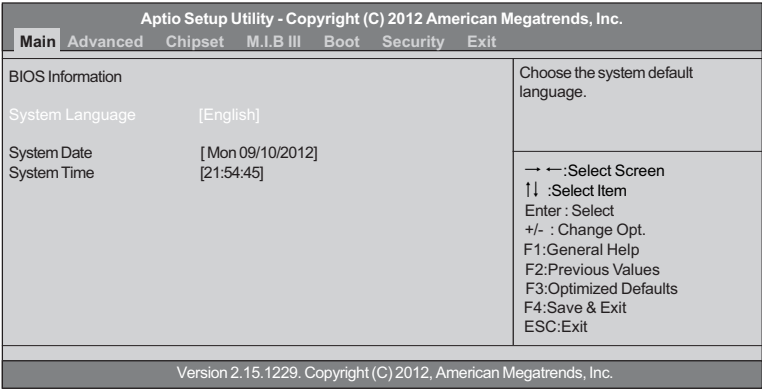

***Resetting the Default CMOS Values***

When powering on for the first time, the POST screen may show a “CMOS Settings Wrong” message. This standard message will appear following a clear CMOS data at factory by the manufacturer. You simply need to Load Default Settings to reset the default CMOS values.

Note: Changes to system hardware such as different CPU, memories, etc. may also trigger this message.



**Using BIOS**

When you start the Setup Utility, the main menu appears. The main menu of the Setup Utility displays a list of the options that are available. A highlight indicates which option is currently selected. Use the cursor arrow keys to move the highlight to other options. When an option is highlighted, execute the option by pressing <Enter>.

Some options lead to pop-up dialog boxes that prompt you to verify that you wish to execute that option. Other options lead to dialog boxes that prompt you for information.

Some options (marked with a triangle ►) lead to submenus that enable you to change the values for the option. Use the cursor arrow keys to scroll through the items in the submenu.

**Using BIOS**

In this manual, default values are enclosed in parenthesis. Submenu items are denoted by a triangle ►.



*The default BIOS setting for this motherboard apply for most conditions with optimum performance. We do not suggest users change the default values in the BIOS setup and take no responsibility to any damage caused by changing the BIOS settings.*

**BIOS Navigation Keys**

The BIOS navigation keys are listed below:

KEY	FUNCTION
ESC	Exits the current menu
↑↓→←	Scrolls through the items on a menu
+/-	Modifies the selected field's values
Enter	Select
F1	General Help
F2	Previous Value
F3	Optimized Defaults
F4	Save & Exit



*For the purpose of better product maintenance, the manufacture reserves the right to change the BIOS items presented in this manual. The BIOS setup screens shown in this chapter are for reference only and may differ from the actual BIOS. Please visit the manufacture's website for updated manual.*

**Main Menu**

When you enter the BIOS Setup program, the main menu appears, giving you an overview of the basic system information. Select an item and press <Enter> to display the submenu.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B III Boot Security Exit
BIOS Information		Choose the system default language.
System Language	[English]	
System Date	[ Mon 09/10/2012]	→ ← : Select Screen ↑ ↓ : Select Item Enter : Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
System Time	[21:54:45]	
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

**System Language (English)**

This item is used to set system language.


**System Date & Time**

The Date and Time items show the current date and time on the computer. If you are running a Windows OS, these items are automatically updated whenever you make changes to the Windows Date and Time Properties utility.




Advanced Menu

The Advanced menu items allow you to change the settings for the CPU and other system.

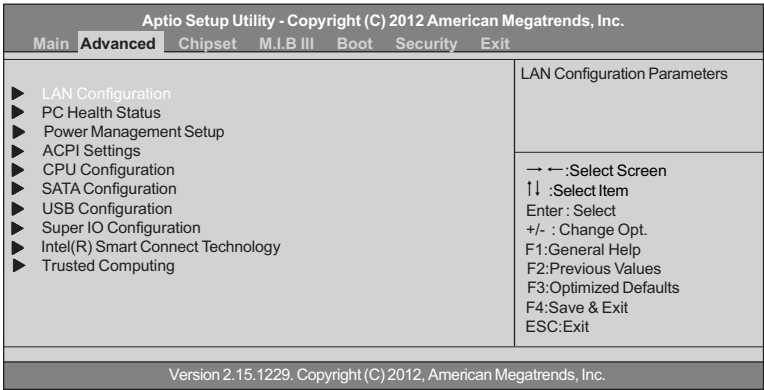

LAN Configuration

The item in the menu shows the LAN-related information that the BIOS automatically detects.

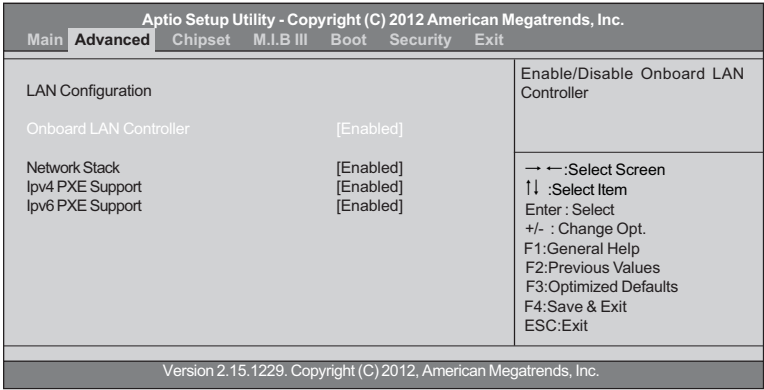

Onboard LAN Controller (Enabled)

Use this item to enable or disable the Onboard LAN.

Network stack (Enabled)

Use this item to enable or disable UEFI network stack.

Ipv4/6 PXE Support (Enabled)

Use these items to enable Ipv4/6 PXE Boot Support. If disabled Ipv4/6 PXE, boot option will not be created.

Press <Esc> to return to the Advanced Menu page.

PC Health Status

On motherboards support hardware monitoring, this item lets you monitor the parameters for critical voltages, temperatures and fan speeds.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main	Advanced
Chipset	M.I.B III
Boot	Security
Exit	
PC Health Status	Smart Fan Function
▶ Smart Fan Function	
CPU Fan Speed : 4115 RPM	→ ←:Select Screen
CPU Voltage : 1.236V	↑↓:Select Item
IMC Voltage : 1.068V	Enter : Select
DIMM Voltage : 1.548V	+/- : Change Opt.
VAXG Voltage : 1.032V	F1:General Help
	F2:Previous Values
	F3:Optimized Defaults
	F4:Save & Exit
	ESC:Exit
-- PECL Mode --	
Offset to TCC Activation Temp. : -24	
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.	

▶ Smart Fan Function

Scroll to this item and press <Enter> to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main	Advanced
Chipset	M.I.B III
Boot	Security
Exit	
CPU Smart Fan Control [Enabled]	CPU Smart Fan Control
SMART Fan Mode [Normal]	
SMART Fan start PWM value 180	→ ←:Select Screen
SMART Fan start PWM TEMP(-) 30	↑↓:Select Item
Delta T +3	Enter : Select
SMART Fan Slope PWM value 10 PWM value/unit	+/- : Change Opt.
CPU Fan Full Speed Offset (-) 23	F1:General Help
	F2:Previous Values
	F3:Optimized Defaults
	F4:Save & Exit
	ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.	

CPU Smart Fan Control (Enabled)

This item allows you to enable/disable the control of the CPU fan speed by changing the fan voltage.

SMART Fan Mode (Normal)

This item allows you to select the fan mode (Normal, Quiet, Silent or Manual) for a better operation environment. If you choose Normal mode, the fan speed will be auto adjusted depending on the CPU temperature. If you choose Quiet mode, the fan speed will be auto minimized for quiet environment. If you choose Silent mode, the fan speed will be auto restricted to make system more quietly. If you choose Manual mode, the fan speed will be adjust depending on users' parameters.

**SMART Fan start PWM value (180)**

This item is used to set the start PWM value of the smart fan.

**SMART Fan start TEMP(-) (30)**

This item is used to set the start temperature of the smart fan.

**DeltaT (+3)**

This item specifies the range that controls CPU temperature and keeps it from going so high or so low when smart fan works.

**SMART Fan Slope PWM value (10 PWM value/unit)**

This item is used to set the Slope Select PWM of the smart fan.

**CPU Fan Full Speed Offset(-) (23)**

This item is used to set the CPU fan full speed offset value.

Press <Esc> to return to the PC Health Status page.

**System Component Characteristics**

These items display the monitoring of the overall inboard hardware health events, such as CPU & DIMM voltage, CPU fan speed...etc.

- CPU Fan Speed
- CPU Voltage
- IMC Voltage
- DIMM Voltage
- VAXG Voltage

Press <Esc> to return to the Advanced Menu page.

Power Management Setup

This page sets up some parameters for system power management operation.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main	Advanced Chipset M.I.B III Boot Security Exit
Power Management Setup	
Resume By RING	[Disabled]
Resume By PME	[Disabled]
Resume By USB2.0 (S3)	[Disabled]
Resume By PS2 KB (S3)	[Disabled]
Resume By PS2 MS (S3)	[Disabled]
EUP Function	[Enabled]
PowerLED Type	[Dual Color LED]
About Resume by Ring	
→ ←: Select Screen	
↑ ↓: Select Item	
Enter : Select	
+/- : Change Opt.	
F1: General Help	
F2: Previous Values	
F3: Optimized Defaults	
F4: Save & Exit	
ESC: Exit	
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.	

Resume By RING (Disabled)

The system can be turned off with a software command. If you enable this item, the system can automatically resume if there is an incoming call on the Modem. You must use an ATX power supply in order to use this feature.

Resume By PME (Disabled)

The system can be turned off with a software command. If you enable this item, the system can automatically resume if there is an incoming call on the PCI Modem or PCI LAN card. You must use an ATX power supply in order to use this feature. Use this item to do wake-up action if inserting the PCI card.

Resume By USB2.0 (S3) (Disabled)

This item allows you to enable/disable the USB device wakeup function from S3 mode.

Resume By PS2 KB (S3) (Disabled)

This item enables or disables you to allow keyboard activity to awaken the system from power saving mode.

Resume By PS2 MS (S3) (Disabled)

This item enables or disables you to allow mouse activity to awaken the system from power saving mode.

EUP Support (Enabled)

This item allows user to enable or disable EUP support.


Power LED Type (Dual Color LED)

This item shows the type of the power LED.

Press <Esc> to return to the Advanced Menu page.

ACPI Setting

The item in the menu shows the highest ACPI sleep state when the system enters suspend.

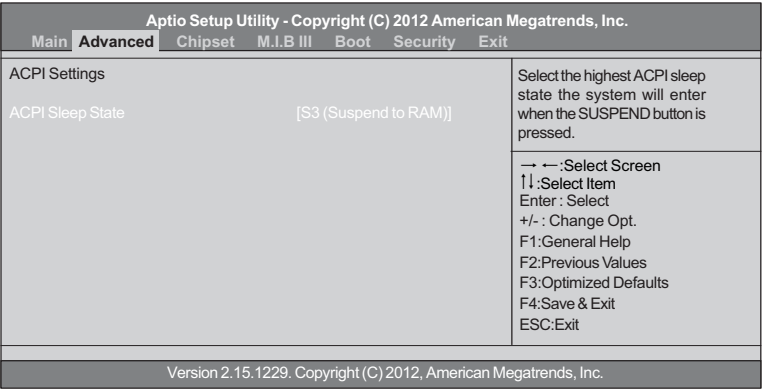


ACPI Sleep State (S3(Suspend to RAM))

This item allows user to enter the ACPI S3 (Suspend to RAM) Sleep State(default).

Press <Esc> to return to the Advanced Menu page.

CPU Configuration

Scroll to this item and press <Enter> to view the following screen:

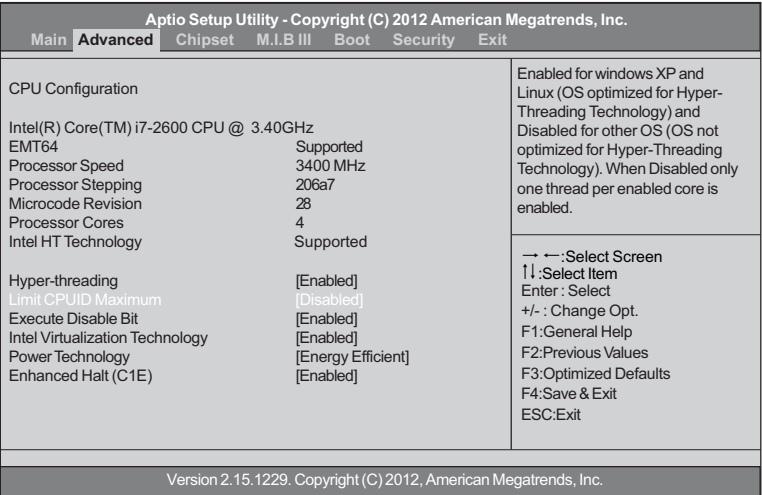

**Intel(R) Core(TM) i7-2600 CPU @ 3.40GHz**

This is display-only field and displays the information of the CPU installed in your computer.

**EMT64 (Supported)**

This item shows the computer supports EMT64.

**Processor Speed (3400MHz)**

This item shows the current processor speed.

**Processor Stepping (206a7)**

This item shows the processor stepping version.

**Microcode Revision (28)**

This item shows the Microcode version.

**Processor Cores (4)**

This item shows the core number of the processor.

**Hyper-threading (Enabled)**

This item is only available when the chipset supports Hyper-threading and you are using a Hyper-threading CPU.

**Limit CPUID Maximum (Disabled)**

Use this item to enable or disable the maximum CPUID value limit.

**Execute Disable Bit (Enabled)**

This item allows the processor to classify areas in memory by where application code can execute and where it cannot. When a malicious worm attempts to insert code in the buffer, the processor disables code execution, preventing damage or worm propagation. Replacing older computers with Execute Disable Bit enabled systems can halt worm attacks, reducing the need for virus related repair.

**Intel Virtualization Technology (Enabled)**

When disabled, a VMM cannot utilize the additional hardware capabilities provided by Vander Pool Technology.

**Power Technology (Energy Efficient)**

Use this item to control the Energy mode of the processor.

**Enhanced Halt (C1E) (Enabled)**

Use this item to enable the CPU energy-saving function when the system is not running.

Press <Esc> to return to the Advanced Menu page.

SATA Configuration

Use this item to show the mode of serial SATA configuration options.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main Advanced Chipset M.I.B III Boot Security Exit		
SATA Configuration		(1) IDE Mode. (2) AHCI Mode.
SATA Mode	[IDE Mode]	
Serial-ATA Controller 0	[Compatible]	
Serial-ATA Controller 1	[Enhanced]	
SATA Port1	HDS72800PLA38 (82.3GB	
SATA Port2	SONY DVD RW ATAPI	
SATA Port3	Not Present	
SATA Port4	Not Present	
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

SATA Mode (IDE Mode)

Use this item to select SATA mode.

Serial-ATA Controller 0/1 (Compatible/Enhanced)

Use these items to select the Serial-ATA 0/1 cotroller options: Disabled, Compatible, Enhanced.

SATA Port 1~4 (HDS72800PLA38 (82.3GB/SONY DVD RW ATAPI/Not Present)

This motherboard supports four SATA channel and each channel allows one SATA device to be installed. Use these items to configure each device on the SATA channel.

Press <Esc> to return to the Advanced Menu page.

USB Configuration

Scroll to this item and press <Enter> to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main	Advanced
Chipset	M.I.B III
Boot	Security
Exit	
USB Configuration	Enabled/Disabled All USB Devices
All USB Devices	[Enabled]
Legacy USB Support	[Enabled]
	→ ←:Select Screen ↑ ↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.	

All USB Devices (Enabled)

Use this item to enable or disable all USB devices.

Legacy USB Support (Enabled)

Use this item to enable or disable support for legacy USB devices. Setting to Audio allows the system to detect the presence of the USB device at startup. If detected, the USB controller legacy mode is enabled. If no USB device is detected, the legacy USB support is disabled.

Press <Esc> to return to the Advanced Menu page.



Super IO Configuration

Use this item to show the information of the Super IO Configuration.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main	Advanced
Chipset	M.I.B III
Boot	Security
Exit	
Super IO Configuration	Set Parameters of Serial Port 0 (COMA)
Super IO Chip IT8728	
Serial Port 0 Configuration	
Parallel Port Configuration	
	→ ←:Select Screen ↑↓:Select Item Enter: Select +/-: Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.	

Super IO Chip (IT8728)

This item shows the information of the super IO chip.

Serial Port 0 Configuration

Scroll to this item and press <Enter> to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main	Advanced
Chipset	M.I.B III
Boot	Security
Exit	
Serial Port 0 Configuration	Enable or Disable Serial Port (COM)
Serial Port Device Settings [Enabled] IO=3F8h; IRQ=4;	
Change Settings [Auto]	
	→ ←:Select Screen ↑↓:Select Item Enter: Select +/-: Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.	

Serial Port (Enabled)

This item allows you to enable or disable serial port.

Device Settings (IO=3F8h; IRQ=4)

This item shows the information of the device settings.

Change Settings (Auto)

Use this item to change device settings.

Press <Esc> to return to the Super IO Configuration page.

► **Parallel Port Configuration**

Scroll to this item and press <Enter> to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	<b>Advanced</b>	Chipset M.I.B III Boot Security Exit
Parallel Port Configuration		Enable or Disable Parallel Port (LPT/LPTE)
Parallel Port	[Enabled]	
Device Settings	IO=378h; IRQ=5; DMA=3	
Change Settings	[Auto]	→ ←:Select Screen
Device Mode	[ECP Mode]	↑ ↓ :Select Item
		Enter : Select
		+/- : Change Opt.
		F1:General Help
		F2:Previous Values
		F3:Optimized Defaults
		F4:Save & Exit
		ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

**Parallel Port (Enabled)**

This item allows you to enable or disable parallel port.

**Device Settings (IO=378h; IRQ=5; DMA=3)**

This item shows the information of the device settings.

**Change Settings (Auto)**

Use this item to change device settings.

**Device Mode (ECP Mode)**

Use this item to select device mode.

Press <Esc> to return to the Super IO Configuration page.

Press <Esc> to return to the Advanced Menu page.

Intel(R) Smart Connect Technology

Use this item to show the information of Intel(R) Smart Connect Technology.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B III Boot Security Exit
ISCT Configuration	[Enabled]	Enabled/Disabled ISCT Configuration
ISCT Notification Control	[Enabled]	→ ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
ISCT WLAN Power Control	[Enabled]	
ISCT WWAN Power Control	[Enabled]	
ISCT Sleep Duration Value Format	[Actual Time]	
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

ISCT Configuration (Enabled)

Use this item to enable/disable ISCT Configuration.

ISCT Notification Control (Enabled)

Use this item to enable/disable ISCT Notification Control.

ISCT WLAN Power Control (Enabled)

Use this item to enable/disable ISCT WLAN Power Control.

ISCT WWAN Power Control (Enabled)

Use this item to enable/disable ISCT WWAN Power Control.

ISCT Sleep Duration Value Format (Actual Time)

Use this item to select actual time or duration in seconds. (ISCT 2.0)

Press <Esc> to return to the Advanced Menu page.

Trusted Computing

Use this item to show the information of trusted computing configuration.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset   M.I.B.III   Boot   Security   Exit
TPM Configuration		Enables or Disables TPM support. O.S. will not show TPM. Reset of platform is required.
TPM Support	[Enabled]	
TPM State	[Enabled]	
Pending TPM operation	[None]	
Current TPM Status Information		→ ←:Select Screen ↑ ↓:Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
TPM Enabled Status:	[Disabled]	
TPM Active Status:	[Deactivated]	
TPM Owner Status:	[UnOwned]	
Version 2.15.1229, Copyright (C) 2012, American Megatrends, Inc.		

TPM Support (Enabled)

This item enables or disables TPM(Trusted Platform Module) support for system security and data integrity. If this option is set to Enabled, the following items will display.

TPM State (Disabled)

Select Enabled to display the status of TPM support for this system. Please note that a system reboot is needed before a change on the TPM state to take effect.

Pending TPM operation (None)

Use this item to schedule a TPM operation that is pending. If the option “None” is displayed, there is no pending TPM operation in the queue. Please note that a system reboot is needed for any change on the feature to become effective.

Current TPM Status Information

This feature displays the current status of the TPM items listed below.

TPM Enabled Status (Disabled)

This item indicates if TPM support is enabled or not in this system.

TPM Active Status (Deactived)

This item indicates if TPM support is active or not in this system.


TPM Owner State (Unowned)

This feature lists the status of the TPM Owner.

Press <Esc> to return to the Advanced Menu page.


Chipset Menu

The chipset menu items allow you to change the settings for the North Bridge chipset, South Bridge chipset and other system.

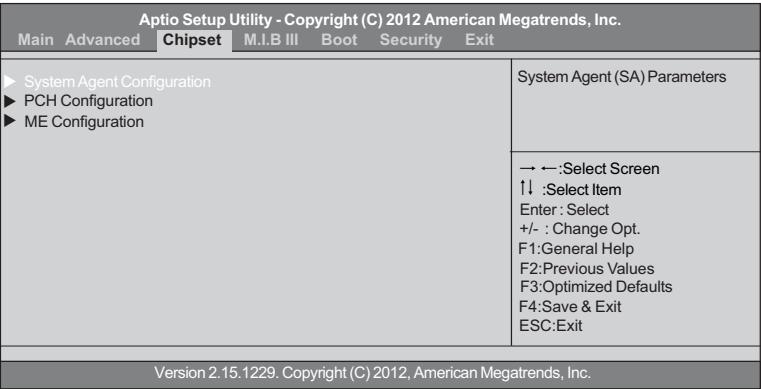

► System Agent Configuration

Scroll to this item and press <Enter> and view the following screen:

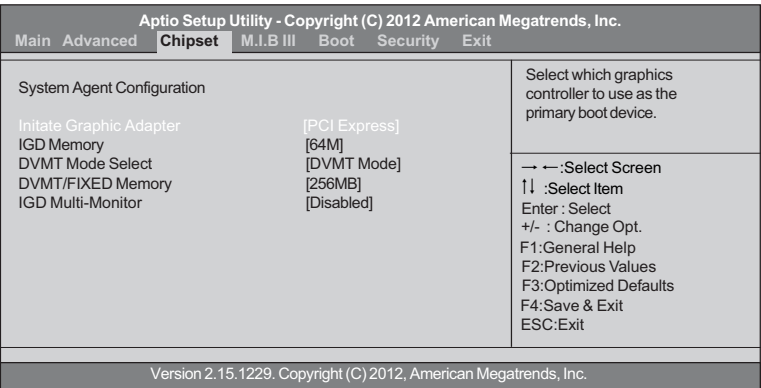

Initate Graphic Adapter (PCI Express)

This item allows you to select graphics controller to use as the primary boot device.

IGD Memory (64M)

This item shows the information of the IGD (Internal Graphics device) memory.

DVMT Mode Select (DVMT Mode)

This item allows you to select the DVMT operating mode.

DVMT/FIXED Memory (256MB)

When set to Fixed Mode, the graphics driver will reserve a fixed position of the system memory as graphics memory, according to system and graphics requirements.

### IGD Multi-Monitor (Disabled)


This item enables or disables IGD(Internal Graphics device) multi-monitor.

Press <Esc> to return to the chipset Menu page.

### Multi-Monitor technology

Multi-Monitor technology can help you to increase the area available for programs running on a single computer system through using multiple display devices.

It is not only to increase larger screen viewing but also to improving personal productivity.

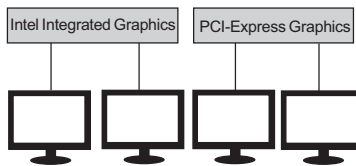


*Please note that Multi-Monitor technology supports up to four monitors: one or two Intel integrated Graphics and one or two PCI-Express graphics devices under Windows 7/8.*

Step 1. Insert ECS drives DVD to run Auto setup or browse the DVD to install Intel chipset drivers, VGA and sound drivers.(If you want know the detail information, please refer to chapter 4.)




**Using BIOS**

Step 2. Install all the drivers of PCI-Express graphic cards. Click the Browse CD item, then appears the following screen. Select the driver you want to install(e.g NVIDIA GeForce 8400 GS(Microsoft Corporation-WDDM v1.1)) and double click it.

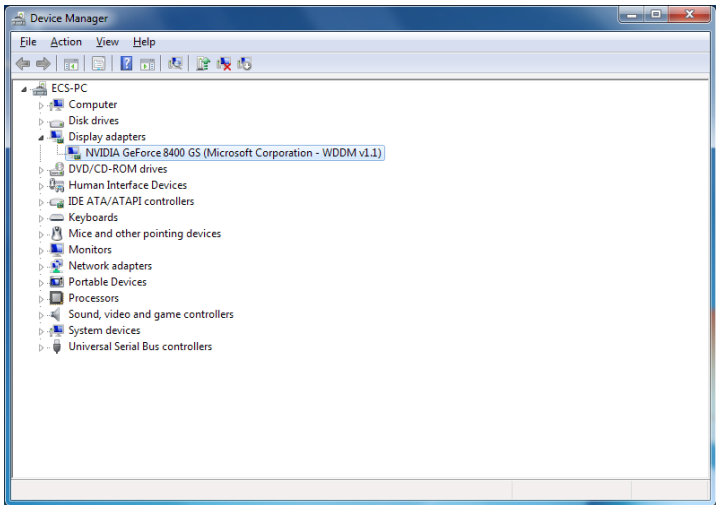


Step 3. Enable IGD Multi-Monitor from BIOS. In the following BIOS screen, please set IGD Multi-Monitor to [Enabled].

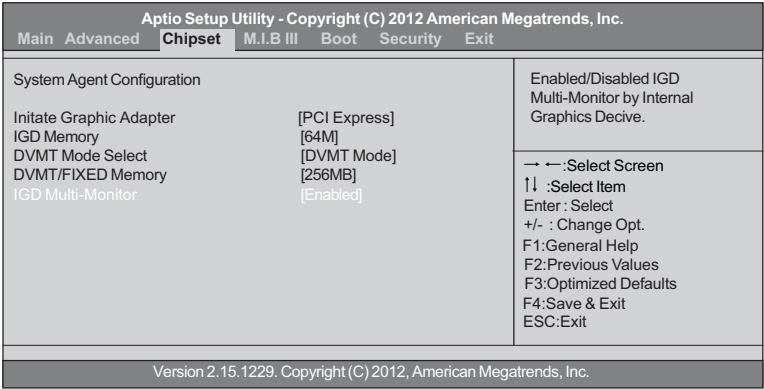


Step 4. Change the appearance of your displays under Windows 7/8.



1. Enter the Control Panel menu, select the Display in the All Control Panel Items and click the Screen Resolution, then appears the following screen.

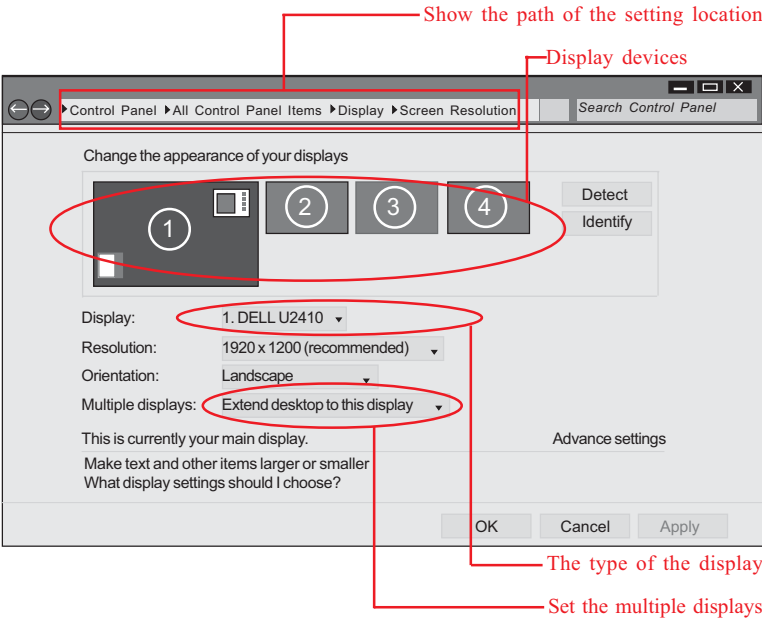

2. Select display devices, set the multiple displays option and to extend desktop for display “Multi-Monitor technology”.

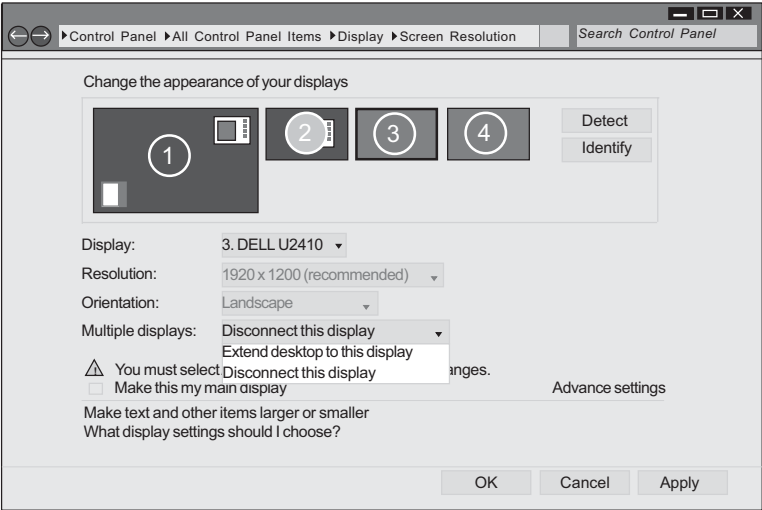



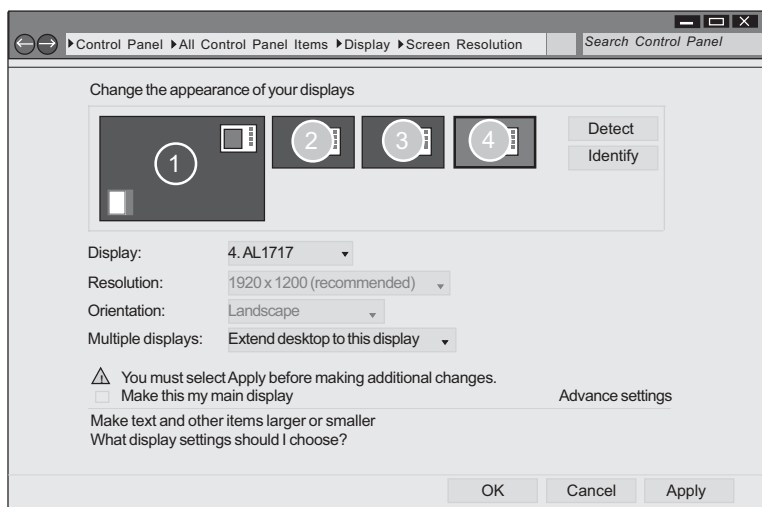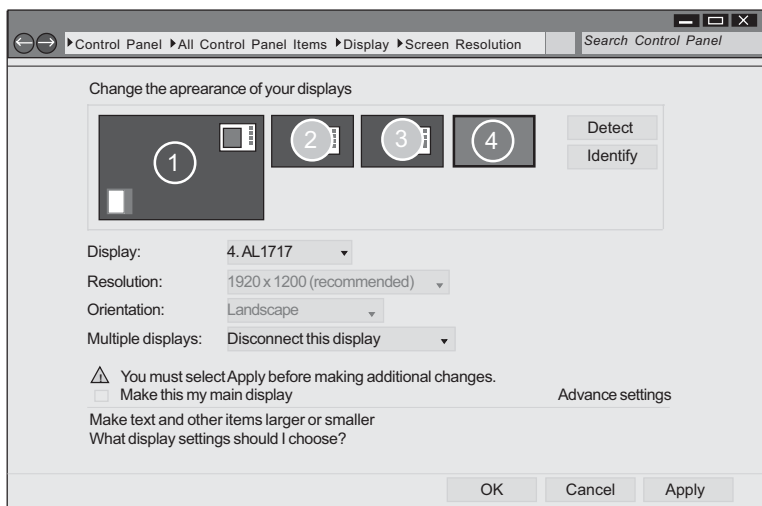

► PCH Configuration

Scroll to this item and press <Enter> to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset
M.I.B III	Boot	Security
Exit		
PCH Configuration		Specify what state to go to when power is re-applied after a power failure (G3 state).
Restore AC Power Loss	[Power Off]	
Audio Configuration		→ ←: Select Screen
Azalia HD Audio	[Enabled]	↑ ↓ : Select Item
Azalia Internal HDMI codec	[Enabled]	Enter : Select
Case Open Warning	[Disabled]	+/- : Change Opt.
Chassis Opened	[No]	F1: General Help
		F2: Previous Values
		F3: Optimized Defaults
		F4: Save & Exit
		ESC: Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

**Restore AC Power Loss (Power Off)**

This item enables your computer to automatically restart or return to its operating status.

**Audio Configuration**

This item shows the information of the audio configuration.

**Azalia HD Audio (Enabled)**

This item enables or disables Azalia HD audio.

**Azalia Internal HDMI codec (Enabled)**

This item enables or disables Azaia Internal HDMI codec.

**Case Open Warning (Disabled)**

This item enables or disables the warning if the case is opened up, and the item below indicates the current status of the case.

**Chassis Opened (No)**

This item indicates whether the case has been opened.

Press <Esc> to return to the Chipset Menu page.

### ► ME Configuration

Scroll to this item and press <Enter> to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.						
Main	Advanced	Chipset	M.I.B III	Boot	Security	Exit
Management Engine Technology Configuration						
ME FW Version			8.1.0.1248			
			→ ←:Select Screen ↑ ↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit			
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.						

### ME FW Version (8.1.0.1248)

This item shows the ME FW version.

Press <Esc> to return to the Chipset Menu page.

M.I.B III (MB Intelligent BIOS III) Menu

This page enables you to set the clock speed and system bus for your system. The clock speed and system bus are determined by the kind of processor you have installed in your system.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset
M.I.B III	Boot	Security
Exit		
M.I.B III (MB Intelligent BIOS III)		Integrated Clock Chip Parameters
▶ Integrated Clock Chip Configuration		
▶ Memory Voltage Control		
▶ Performance Tuning		
B.O.M.P Technology		[Enabled]
Auto Detect DIMM/PCI Clk		[Enabled]
Spread Spectrum		[Enabled]
Command Rate		[Auto]
Intel(R) Core(TM) i7-2600 CPU @ 3.40GHz		
Processor Speed		3400 MHz
Total Memory		1024 MB (DDR3 1066)
		→ ←:Select Screen
		↑↓:Select Item
		Enter : Select
		+/- : Change Opt.
		F1:General Help
		F2:Previous Values
		F3:Optimized Defaults
		F4:Save & Exit
		ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

▶ Integrated Clock Chip Configuration

Scroll to this item to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset
M.I.B III	Boot	Security
Exit		
Integrated Clock Chip Configuration		Integrated Clock Chip Enabled/Disabled.
ICC OverClocking Lib Version		7.0.0.29
Number of ICC Profiles :		N/A
Current ICC Profile Index :		N/A
ICC Enable		[Disabled]
		→ ←:Select Screen
		↑↓:Select Item
		Enter : Select
		+/- : Change Opt.
		F1:General Help
		F2:Previous Values
		F3:Optimized Defaults
		F4:Save & Exit
		ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

ICC Over-Clocking Lib Version (7.0.0.29)

This item shows the ICC over-clocking lib version.

Number of ICC Profiles (N/A)

This item shows number of ICC profiles.

**Current ICC Profiles Index (N/A)**

This item shows current ICC profiles index.

**ICC Enable (Disabled)**

This item allows you to enable or disable current ICC.

Press <Esc> to return to the M.I.B III menu page.

**► Memory Voltage Control**

Scroll to this item to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main	Advanced
Chipset	<b>M.I.B III</b>
Boot	Security
Exit	
Memory Voltage Control	Memory Voltage Control
Memory Voltage Config	[Auto]
	→ ←:Select Screen ↑ ↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.	

**Memory Voltage Config (Auto)**

This item allows users to select memory voltage config. If the option is set to Enabled, the following item will display.

**Memory Voltage (1.55V)**

This item allows users to adjust memory voltage.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main	Advanced
Chipset	<b>M.I.B III</b>
Boot	Security
Exit	
Memory Voltage Control	Memory Voltage Control
Memory Voltage Config	[Manual]
Memory Voltage	[1.55]
	→ ←:Select Screen ↑ ↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.	

Press <Esc> to return to the M.I.B III menu page.

► Performance Tunning

Scroll to this item to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main Advanced Chipset <b>M.I.B III</b> Boot Security Exit	
Performance Tunning	CPU Configuration
► CPU Configuration	
► Chipset Configuration	→ ←:Select Screen ↑ ↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.	

► CPU Configuration

Scroll to this item to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main Advanced Chipset <b>M.I.B III</b> Boot Security Exit	
CPU Ratio 34	IA Core Current
IA Core Current [Normal]	
Power Limit 1 Value (Watt) 95	
Power Limit 2 Switch [Enabled]	
Power Limit 2 Value 118	→ ←:Select Screen
Long duration Maintained 1	↑ ↓ :Select Item
Enhanced Intel SpeedStep Technology [Enabled]	Enter : Select
Turbo Mode [Enabled]	+/- : Change Opt.
1 Core Ratio Limit 38	F1:General Help
2 Core Ratio Limit 37	F2:Previous Values
3 Core Ratio Limit 36	F3:Optimized Defaults
4 Core Ratio Limit 35	F4:Save & Exit
	ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.	

**CPU Ratio (34)**

This item allows users to control non turbo CPU ratio.

**IA Core Current (Normal)**

Use this item to control CPU Current Limit. This is for Turbo mode.

**Power Limit 1 Value(Watt) (95)**

Use this item to control the limit of the TDP. This is for Turbo mode.

**Power Limit 2 Switch (Enabled)**

Use this item to control the Power Limit 2. This is for Turbo mode.

**Power Limit 2 Value (118)**

Use this item to control Power Limit 2. PL2 provides an upper limit of the TDP excursions. This is for Turbo mode.

**Long Duration Maintained (1)**

Use this item to control the time window over PL1 value should be maintained. This is for Turbo mode.

**Enhanced Intel SpeedStep Technology (Enabled)**

This item allows users to enable or disable the EIST(Enhanced Intel SpeedStep Technology).

**Turbo Mode (Enabled)**

This item allows you to control the Intel Turbo Boost Technology.

**1/2/3/4 Core Ratio (38/37/36/35)**

These items show the Core Ratio limit value.

Press <Esc> to return to the Performance Tunning page.

**► Chipset Configuration**

Scroll to this item to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset
M.I.B III	Boot	Security
Exit		
Memory Multiplier Configuration		Disabled/Enabled GT OverClocking
Memory Multiplier	[10.67]	
Memory Timing Configuration		
CAS# Latency (tCL)	7	
Row Precharge Time (tRP)	7	
RAS# to CAS# Delay (tRCD)	7	
RAS# Active Time (tRAS)	20	
Write Recovery Time(tWR)	8	
Row Refresh Cycle Time(tRFC)	59	
Write to Read Delay(tWTR)	4	
Active to Active Delay(tRRD)	4	
Read CAS# Precharge(tRTP)	4	
Four Active Window Delay(tFAW)	20	
Intel Graphics Configuration		
GT OverColocking	[Disabled]	
		→ ←:Select Screen ↑ ↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

**Memory Multiplier Configuration**

This item shows the information of Memory Multiplier Configuration.

**Memory Multiplier (10.67)**

This item shows the information of Memory Multiplier.

**Memory Timing Configuration**

This item shows the information of Memory Timing Configuration.

**CAS# Latency(tcl) (7)**

This item determines the operation of DDR SDRAM memory CAS (column address strobe). It is recommended that you leave this item at the default value. The 2T setting requires faster memory that specifically supports this mode.

**Row Precharge Time(trp) (7)**

This item specifies Row precharge to Active or Auto-Refresh of the same bank.

**RAS# to CAS# Delay(tRD) (7)**

This item specifies the RAS# to CAS# delay to Rd/Wr command to the same bank.

**RAS# Active Time(tRAS) (20)**

This item specifies the RAS# active time.

**Write Recovery Time(tWR) (8)**

This item specifies the write recovery time.

**Row Refresh Cycle Time(tRFC) (59)**

This item specifies the row refresh cycle time.

**Write to Read Delay(tWTR) (4)**

This item specifies the write to read delay time.

**Active to Active Delay(tRRD) (4)**

This item controls the ACTIVE bank x to ACTIVE bank y delay in memory clock cycles.

**Read CAS# Precharge(tRTP) (4)**

This item controls the Read to PRECHARGE delay for memory devices, in memory clock cycles.

**Four Active Window Delay(tFAW)(20)**

This item controls the four bank activate time in memory clock cycles.

**Intel Graphics Configuration**

This item shows the information of Intel Graphics Configuration.

**GT OverClocking (Disabled)**

This item allows you to control the internal GFX Turbo mode.

Press <Esc> to return to the Performance Tunning page.

Press <Esc> to return to the M.I.B III Menu page.



**B.O.M.P Technology (Enabled)**

This item allows users to enable or disable B.O.M.P technology. This function can run safe setting to setup menu when system boot fail 3 times.

**Auto Detect DIMM/PCI Clk (Enabled)**

When this item is enabled, BIOS will disable the clock signal of free DIMM/PCI slots.

**Spread Spectrum (Enabled)**

If you enable spread spectrum, it can significantly reduce the EMI (Electro-Magnetic Interference) generated by the system.

**Command Rate (Auto)**

This item allows users to set command rate.

**Intel(R) Core(TM) i7-2600 CPU @ 3.40GHz**

This is display-only field and displays the information of the CPU installed in your computer.

**Processor Speed (3400MHz)**

This item shows the CPU speed.

**Total Memory (2048MB(DDR3 1066))**

This item shows the total memory of DDR3.

Boot Menu

This page enables you to set the keyboard NumLock state.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset
M.I.B III	Boot	Security
Exit		
Boot Configuration		Windows 7 or other OS: Boot policy for Legacy OS
Operation System Select	[Windows7 or other OS]	
Launch PXE OpROM	[Disabled]	Windows 8: Boot Policy for UEFI OS without Compatibility Support Module (CSM)
Launch Storage OpROM	[Enabled]	
Bootup NumLock State	[On]	Manual: User customized CSM parameters & boot policy
Quiet Boot	[Enabled]	
Boot mode select	[LEGACY]	
Set Boot Priority		
Boot Option #1	[Hard Disk]	
Boot Option #2	[CD/DVD]	
Boot Option #3	[USB / Floppy]	
Boot Option #4	[USB CD/DVD]	
Boot Option #5	[USB Hard Disk]	
Boot Option #6	[USB Flash]	
Boot Option #7	[Network]	
Hard Disk Drive Priorities	[Press Enter]	→ ←:Select Screen
CD/DVD ROM Drive Priorities	[Press Enter]	↑↓ :Select Item
USB/ Floppy Drive Priorities	[Press Enter]	Enter : Select
USB CD/DVD ROM Drive Priorities	[Press Enter]	+/- : Change Opt.
USB HardDisk Drive Priorities	[Press Enter]	F1:General Help
USB Flash Drive Priorities	[Press Enter]	F2:Previous Values
Network Device Priorities	[Press Enter]	F3:Optimized Defaults
► CSM parameters	[Press Enter]	F4:Save & Exit
		ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

Boot Configuration

This item shows the information of the Boot Configuration.

Operation System Select (Windows7 or other OS)

This item is used to select the operation system.

Launch PXE OpROM (Disabled)

The item enables or disables launch PXE Option ROM.

Launch Storage OpROM (Enabled)

The item enables or disables launch Storage Option ROM.

Bootup NumLock State (On)

This item enables you to select NumLock state.

Quiet Boot (Enabled)

This item enables or disables quiet boot.

Boot mode select (LEGACY)

Use this item to select boot mode.

Set Boot Priority

This item enables you to set boot priority for all boot devices.

Boot Option #1/2/3/4/5/6/7

These items show the boot priorities.

**Hard Disk / CD/DVD ROM / USB Floppy / USB CD/DVD ROM / USB HardDisk / USB Flash / Network Boot Drive Priorities**

These items enable you to specify the sequence of loading the operating system. Press <Enter> to see the submenu.

**CSM parameters**

OpROM execution, boot options filter,etc.

**► CSM parameters**

Scroll to this item and press <Enter> to view the following screen.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.						
Main	Advanced	Chipset	M.I.B III	<b>Boot</b>	Security	Exit
Launch CSM				[Always]	This option controls if CSM will be launched	
Boot option filter				[UEFI and Legacy]		
Launch PXE OpROM policy				[Do not launch]	→ ←:Select Screen ↑↓ :Select Item Enter :Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit	
Launch Storage OpROM policy				[Legacy only]		
Launch Video OpROM policy				[Legacy only]		
Other PCI device ROM priority				[Legacy OpROM]		
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.						

**Launch CSM**

This option controls if CSM will be launched.

**Boot option filter**

This option controls what devices system can boot to.

**Launch PXE OpROM policy**

This controls the execution of UEFI and Legacy PXE OpROM.

**Launch Storage OpROM policy**

This controls the execution of UEFI and Legacy Storage OpROM.

**Launch Video OpROM policy**

This controls the execution of UEFI and Legacy Video OpROM.

**Other PCI device ROM priority**

For PCI devices other than Network, Mass storage or Video defines which OpROM to launch.

Press <Esc> to return to the Boot Menu page.

Security Menu

This page enables you to set setup administrator password and user password.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B III Boot Security Exit
Administrator Password Status		Not Install
User Password Status		Not Install
Administrator Password		
System Mode state		Setup
Secure Boot state		Disabled
Secure Boot		[Enabled]
Secure Boot Mode		[Custom]
► Image Execution Policy		
► Key Management		
		Secure Boot mode selector. 'Standard' -fixed Secure boot policy. 'Custom' -changeable Image Execution policy and Secure Boot Key data bases
		→ ←:Select Screen
		↑ ↓ :Select Item
		Enter : Select
		+/- : Change Opt.
		F1:General Help
		F2:Previous Values
		F3:Optimized Defaults
		F4:Save & Exit
		ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

Administrator Password Status (Not Install)

This item shows administrator password installed or not.

User Password Status (Not Install)

This item shows user password installed or not.

System Mode state (Setup)

This item shows system mode setup or not.

Secure Boot state (Disabled)

This item allows you to enable or disable the secure boot state.

Secure Boot (Enabled)

This item is used to control the secure boot flow, it is possible only if system runs in User Mode.

Secure Boot Mode (Custom)

This item is used to select secure boot mode, when you select standard mode, secure boot policy is fixed; when you select custom mode, the image execution policy and secure boot key databases are changeable.

► **Image Execution Policy**

Scroll to this item to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B III Boot <b>Security</b> Exit
Internal FV	[Always Execute]	Image Execution Policy per device path on Security Violation. Note: Only users logged with Administrative password can exercise Query User policy setting
Option ROM	[Deny Execute]	
Removable Media	[Deny Execute]	
Fixed Media	[Deny Execute]	
		→ ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.		

**Internal FV/Option ROM/Removable Media/Fixed Media (Always Execute/Deny Execute)**

These items allow you to select image execution policy per device path on security violation. Only users logged with administrative password can exercise query user policy setting.

Press <Esc> to return to the Security Menu page.

► **Key Management**

Scroll to this item to view the following screen:

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.						
Main	Advanced	Chipset	M.I.B III	Boot	Security	Exit
Default Key Provisioning					[Disabled]	Force OEM default Secure Boot Keys if System is in Setup Mode.
Manage All Factory Keys (PK, KEK, DB, DBX)						
Install default Secure Boot keys						
Platform Key (PK)					NOT INSTALLED	
▶ Set PK from File						
▶ Get PK to File						
▶ Delete the PK						
Key Exchange Key Database (KEK)					NOT INSTALLED	
▶ Set KEK from File						
▶ Get KEK to File						
▶ Delete the KEK						
▶ Append an entry to KEK						
Authorized Signature Database (DB)					NOT INSTALLED	
▶ Set DB from File						
▶ Get DB to File						
▶ Delete the DB						
▶ Append an entry to DB						
Forbidden Signature Database (DBX)					NOT INSTALLED	
▶ Set DBX from File						
▶ Get DBX to File						
▶ Delete the DBX						
▶ Append an entry to DBX						
						→ ←:Select Screen
						↑↓ :Select Item
						Enter : Select
						+/- : Change Opt.
						F1:General Help
						F2:Previous Values
						F3:Optimized Defaults
						F4:Save & Exit
						ESC:Exit
Version 2.15.1229. Copyright (C) 2012, American Megatrends, Inc.						

**Default Key Provisioning (Disabled)**

This item enables or disables you to force OEM default secure boot keys if system is in setup mode.

**Platform Key (PK)**

This item shows the information of the platform key.

**Set PK/KEK/DB/DBX from File**

This item launches the file browser to set Efi Variable from the file. The file data must be formatted as Efi Variable with TimeBased Authenticated Header.

**Get PK/KEK/DB/DBX to File**

This item is used to store secure variable to a file with a matching name in selected file system's root.

**Delete the PK/KEK/DB/DBX**

This item is used to delete the variable.

**Key Exchange Key Database (KEK)**

This item shows the information of the key exchange key database.

**Authorized Signature Database (DB)**

This item shows the information of the authorized signature database.

**Forbidden Signature Database (DBX)**

This item shows the information of the forbidden signature database.

**Append an entry to KEK/DB/DBX**

This item launches the file browser to Append new signature database from the file. The file data must be formatted as Efi Variable with TimeBased Authenticated Header.

**Exit Menu**

This page enables you to exit system setup after saving or without saving the changes.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main   Advanced   Chipset   M.I.B III   Boot   Security <b>Exit</b>	
Save Changes and Exit Discard Changes and Exit Save Changes and Reset Discard Changes and Reset  Save Options Save Changes Discard Changes  Restore Defaults Save as User Defaults Restore User Defaults  Boot Override SATA: HDS728020PLA380 SATA: SONY   DVD RW DRU-190S	Exit system setup after saving the changes.  → ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.15.1229, Copyright (C) 2012, American Megatrends, Inc.	

**Save Changes and Exit**

This item enables you to save the changes that you have made and exit.

**Discard Changes and Exit**

This item enables you to discard any changes that you have made and exit.

**Save Changes and Reset**

This item enables you to save the changes that you have made and reset.

**Discard Changes and Reset**

This item enables you to discard any changes that you have made and reset.

**Save Options**

This item enables you to save the options that you have made.

**Save Changes**

This item enables you to save the changes that you have made.

**Discard Changes**

This item enables you to discard any changes that you have made.

**Restore Defaults**

This item enables you to restore the system defaults.

**Save as User Defaults**

This item enables you to save the changes that you have made as user defaults.

**Restore User Defaults**

This item enables you to restore user defaults.

**Boot Override**

Use this item to select the boot device.

### *Updating the BIOS*

You can download and install updated BIOS for this motherboard from the manufacturer's Web site. New BIOS provides support for new peripherals, improvements in performance, or fixes for known bugs. Install new BIOS as follows:

- 1 If your motherboard has a BIOS protection jumper, change the setting to allow BIOS flashing.
- 2 If your motherboard has an item called Firmware Write Protect in Advanced BIOS features, disable it. (Firmware Write Protect prevents BIOS from being overwritten.)
- 3 Prepare a bootable device or create a bootable system disk. (Refer to Windows online help for information on creating a bootable system disk.)
- 4 Download the Flash Utility and new BIOS file from the manufacturer's Web site. Copy these files to the bootable device.
- 5 Turn off your computer and insert the bootable device in your computer. (You might need to run the Setup Utility and change the boot priority items on the Advanced BIOS Features Setup page, to force your computer to boot from the bootable device first.)
- 6 At the C:\ or A:\ prompt, type the Flash Utility program name and the file name of the new BIOS and then press <Enter>. Example: AFUDOS.EXE 040706.ROM
- 7 When the installation is complete, remove the bootable device from the computer and restart your computer. If your motherboard has a Flash BIOS jumper, reset the jumper to protect the newly installed BIOS from being overwritten. The computer will restart automatically.

This concludes Chapter 3. Refer to the next chapter for information on the software supplied with the motherboard.




# Chapter 4

## Using the Motherboard Software

### Auto-installing under Windows XP/7/8


The auto-install DVD-ROM makes it easy for you to install the drivers and software. The support software DVD-ROM disc loads automatically under Windows XP/7/8. When you insert the DVD-ROM disc in the DVD-ROM drive, the auto-run feature will automatically bring up the installation screen. The screen has four buttons on it: **Setup**, **Utilities**, **Browse CD** and **Exit**.

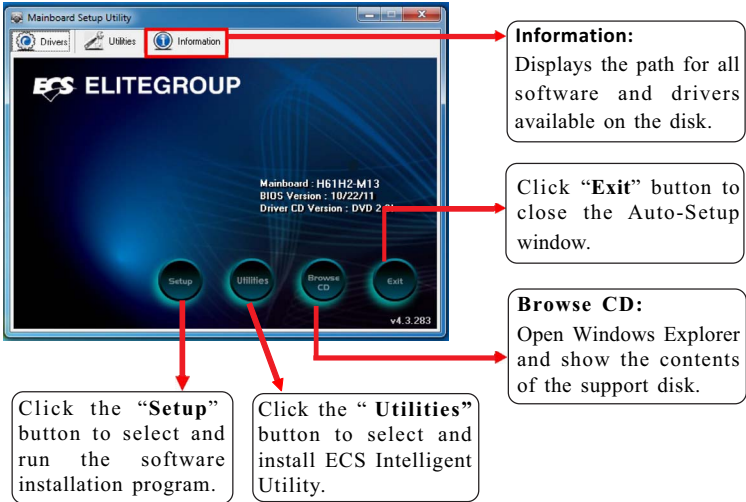

### Running Setup

Follow these instructions to install device drivers and software for the motherboard:


1. Click **Setup**. The installation program begins:

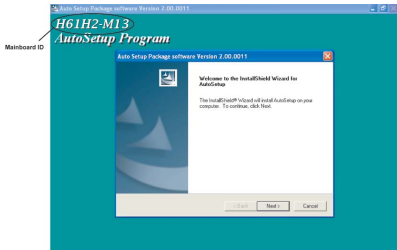

*The following screens are examples only. The screens and driver lists will be different according to the motherboard you are installing.*

The motherboard identification is located in the upper left-hand corner.

- Click **Next**. The following screen appears:

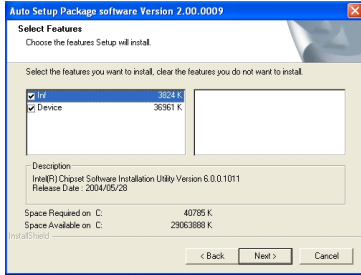

- Check the box next to the items you want to install. The default options are recommended.
- Click **Next** to run the Installation Wizard. An item installation screen appears:



- Follow the instructions on the screen to install the items.




*Drivers and software are automatically installed in sequence. Follow the onscreen instructions, confirm commands and allow the computer to restart a few times to complete the installation.*

*Windows 8 will show the following screen after system restart, you must select "Desktop" in the bottom left to install the next driver.*



*Windows 7/8 will appear below UAC (User Account Control) message after the system restart. You must select “Yes” to install the next driver. Continue this process to complete the drivers installation.*

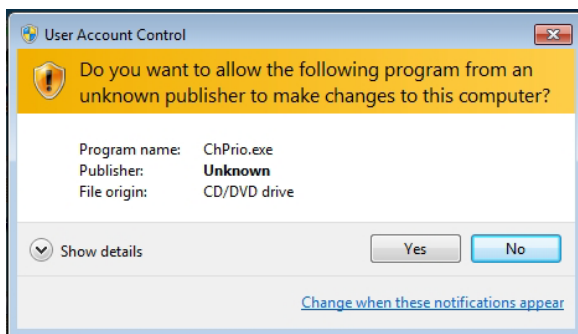

## Manual Installation

If the auto-install DVD-ROM does not work on your system, you can still install drivers through the file manager for your OS (for example, Windows Explorer). Look for the chipset and motherboard model, and then browse to the directory and path to begin installing the drivers. Most drivers have a setup program (SETUP.EXE) that automatically detects your operating system before installation. Other drivers have the setup program located in the operating system subfolder.

If the driver you want to install does not have a setup program, browse to the operating system subfolder and locate the readme text file (README.TXT or README.DOC) for information on installing the driver or software for your operating system.

## ECS Utility Software (Intelligent EZ Utility)


ECS Intelligent EZ Utility provides friendly interfaces under Windows O.S, which makes your computing more easily and conveniently.



*These software(s) are subject to change at anytime without prior notice. Please refer to the support disk for available software.*

**eSF**

eSF(Smart Fan) utility provides easy and safe way to adjust fan speed in accordance with your PC's system loading and temperature. It has five modes to adjust fan speed in a safe range without entering the BIOS to optimize your system cooling environment.

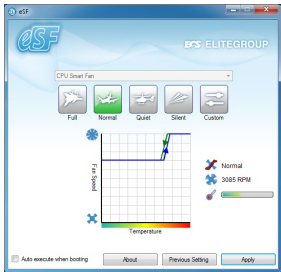

 *Microsoft .NET Framework 3.5 is required.*


**eDLU**

ECS eDLU utility makes updating drivers fast and easy. eDLU saves time and hassle by listing all the latest drivers online. Just select the one you prefer and start to download and install the drivers.



**eBLU**

ECS eBLU utility makes BIOS update faster and easier. eBLU will list the latest BIOS with a default check-mark. Click"install" button to install.

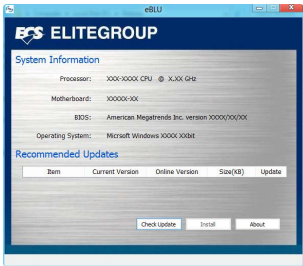

 *Microsoft .NET Framework 3.5 is required.*

**Using the Motherboard Software**

## Chapter 5

### ***Trouble Shooting***

---

#### **Start up problems during assembly**

After assembling the PC for the first time you may experience some start up problems. Before calling for technical support or returning for warranty, this chapter may help to address some of the common questions using some basic troubleshooting tips.

##### ***a) System does not power up and the fans are not running.***

1. Disassemble the PC to remove the VGA adaptor card, DDR memory, LAN, USB and other peripherals including keyboard and mouse. Leave only the motherboard, CPU with CPU cooler and power supply connected. Turn on again to see if the CPU and power supply fans are running.
2. Make sure to remove any unused screws or other metal objects such as screwdrivers from the inside PC case. This is to prevent damage from short circuit.
3. Check the CPU FAN connector is connected to the motherboard.
4. For Intel platforms check the pins on the CPU socket for damage or bent. A bent pin may cause failure to boot and sometimes permanent damage from short circuit.
5. Check the 12V power connector is connected to the motherboard.
6. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.

##### ***b) Power is on, fans are running but there is no display***

1. Make sure the monitor is turned on and the monitor cable is properly connected to the PC.
2. Check the VGA adapter card (if applicable) is inserted properly.
3. Listen for beep sounds. If you are using internal PC speaker make sure it is connected.
  - a. continuous 3 short beeps: memory not detected
  - b. 1 long beep and 8 short beeps: VGA not detected

##### ***c) The PC suddenly shuts down while booting up.***

1. The CPU may experience overheating so it will shutdown to protect itself. Ensure the CPU fan is working properly.

2. From the BIOS setting, try to disable the Smartfan function to let the fan run at default speed. Doing a Load Optimised Default will also disable the Smartfan.

## Start up problems after prolong use

After a prolong period of use your PC may experience start up problems again. This may be caused by breakdown of devices connected to the motherboard such as HDD, CPU fan, etc. The following tips may help to revive the PC or identify the cause of failure.


1. Clear the CMOS values using the CLR\_CMOS jumper. Refer to CLR\_CMOS jumper in Chapter 2 for Checking Jumper Settings in this user manual. When completed, follow up with a Load Optimised Default in the BIOS setup.
2. Check the CPU cooler fan for dust. Long term accumulation of dust will reduce its effectiveness to cool the processor. Clean the cooler or replace a new one if necessary.
3. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.
4. Remove the hard drive, optical drive or DDR memory to determine which of these components may be at fault.

## Maintenance and care tips

Your computer, like any electrical appliance, requires proper care and maintenance. Here are some basic PC care tips to help prolong the life of the motherboard and keep it running as best as it can.

1. Keep your computer in a well ventilated area. Leave some space between the PC and the wall for sufficient airflow.
2. Keep your computer in a cool dry place. Avoid dusty areas, direct sunlight and areas of high moisture content.
3. Routinely clean the CPU cooler fan to remove dust and hair.
4. In places of hot and humid weather you should turn on your computer once every other week to circulate the air and prevent damage from humidity.
5. Add more memory to your computer if possible. This not only speeds up the system but also reduces the loading of your hard drive to prolong its life span.
6. If possible, ensure the power cord has an earth ground pin directly from the wall outlet. This will reduce voltage fluctuation that may damage sensitive devices.

## Basic Troubleshooting Flowchart

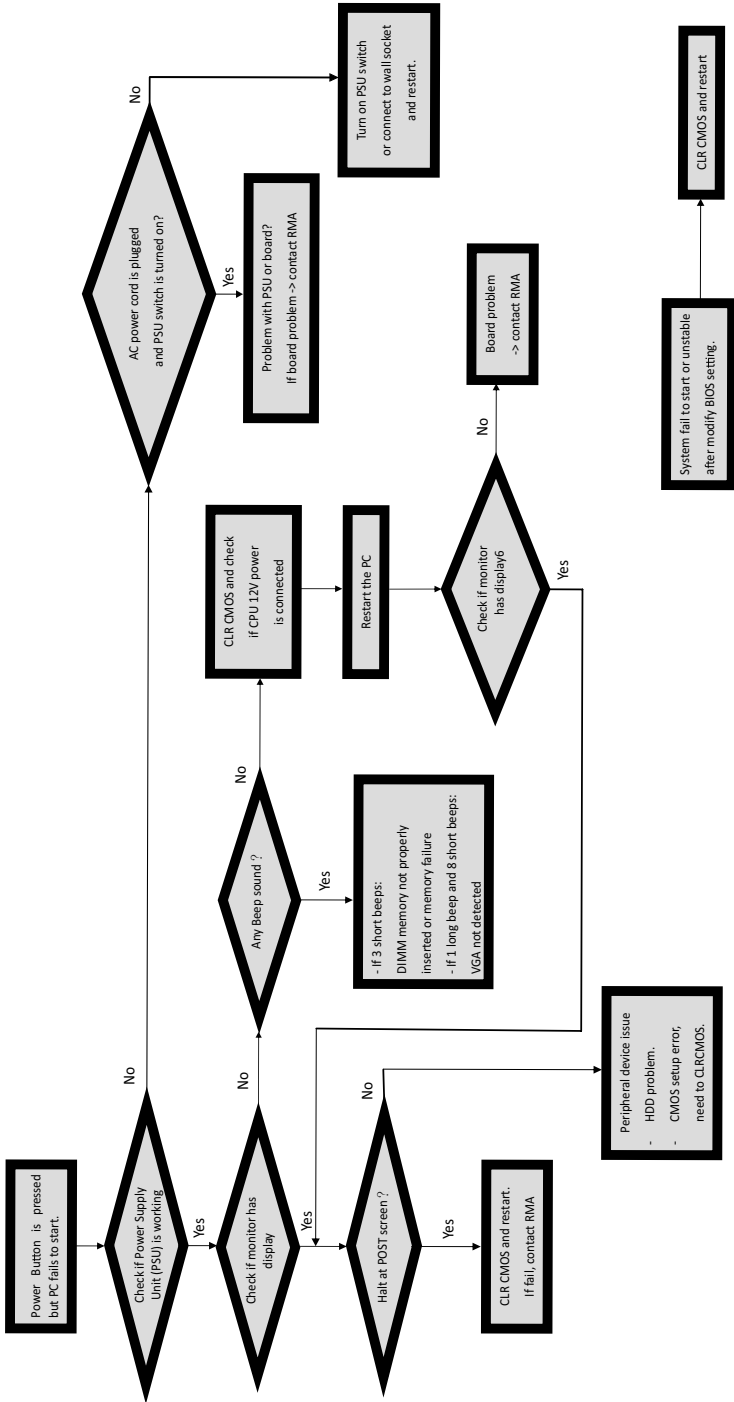

***Memo***